

PHILIPS



Easy Taping



Important!
Return your Warranty Registration
Card within 10 days. See why inside.

Owner's Manual



Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS warranty.

Owner Confirmation


Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these

safety symbols

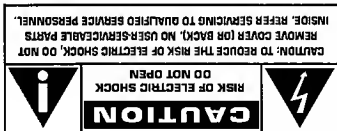

⚡ This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

⚠ The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert. **ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____
Serial No. _____

PHILIPS

Congratulations on your purchase, and welcome to the "family!"

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome-and thanks for investing in a PHILIPS product.

Sincerely,

Robert Minkhorst
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

Introduction 3

Welcome to your VCR owner's manual.

This manual describes the VRB461 and the VRB661. The VRB461 is a monaural (single sound source) system, while the VRB661 is a stereo system. Otherwise, the two models are exactly the same. In this manual, the VRB661 is illustrated. (The VRB461 has single AUDIO IN/OUT jacks. Otherwise, the VRB461 looks exactly like the VRB661.) This manual has seven sections: Setting Up Your VCR; Description of Controls; Basic Operations; Recording; Playing; Additional Features; and Information You May Need. The instructions explain all of the VCR's features, which are listed below. You cannot hurt your VCR by trying the features! So read on — and relax.

Features

- Automatic Channel Setup
- Automatic Clock Setting with Time Zone
- Automatic Head Cleaner
- Blue Background
- Child Lock
- Front Panel Menu Access
- Hi-Fi Stereo Sound System (VRB661 only)
- Lighted Front Panel buttons
- MTS (Multi-Channel Television Sound) System (VRB661 only)

Safety Precautions

Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

Federal Communications Commission Warning: Any unauthorized changes or modifications to this equipment void the user's authority to operate it.

This VCR is equipped with a High Quality (HQ) system and is compatible with existing Video Home System (VHS) equipment.

Philips Consumer Electronics Company recommends that you use only video cassette tapes which are labeled with the **VHS** mark. The use of other tapes may result in poor picture quality and excessive deposits on the video heads, which may not be covered by the warranty if damage occurs.

Note to the Cable TV System Installer: This reminder is provided to call the Cable TV system installer's attention to Article 820-40 of the National Electrical Code, which provides guidelines for proper grounding — in particular, specifying that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.

Declaration of Conformity

Model Number: VRB461AT/VRB661AT
Trade Name: Philips
Responsible Party: Philips Consumer Electronics
Knoxville, TN 37914-1810
P.O. Box 14810
(865) 521-4316

As an ENERGY STAR® Partner, Philips Consumer Electronics Company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. ENERGY STAR® is a U.S. registered mark. Using products with the ENERGY STAR® label can save energy. Saving energy reduces air pollution and lowers utility bills.

Copyright 2000 Philips Consumer Electronics Company. All rights reserved.

ShowGuard is a trademark of Philips Consumer Electronics Company. VCR Plus+® and PlusCode® are registered trademarks of Gemstar Development Corporation. The VCR Plus+ Programming system is manufactured under license from Gemstar Development Corporation.

- 19 micron head
- One-Touch Recording
- Remote Control with capability to operate TV, Cable Box, and Direct Broadcast System
- Repeat Play
- S-VHS Quasi Play Back (SQPB)
- ShowGuard™ - Indefinite Timer Recording memory
- The VCR Plus+ Programming System
- Time Search
- Timer Recording

Helpful Hint

- This manual, your new product, and the packaging contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount that needs to be properly disposed. Your product uses batteries that should not be thrown away when depleted but should be disposed of as small chemical waste. Please find out about the local regulations on disposal of your old product, batteries, manual, and packaging whenever you replace equipment.

4 Table of Contents

Setting Up Your VCR

Introduction	3
Table of Contents	4
Before Using Your VCR	5
Hookups without a Cable Box/Direct Broadcast System	6-7
Hookups with a Cable Box/Direct Broadcast System	8-9
Hookups with a Stereo TV	10
Turning on Your VCR	11
Automatic Channel Setup	12-14
Setting the Clock	15-18
Daylight-Savings Time	19
Language Selection	20
Setting the Remote to Operate a TV	21
Setting the Remote to Operate a Cable Box/Direct Broadcast System	22

Description of Controls

Remote Control Buttons	23-24
On-Screen Status Displays	25
VCR Display Panel	26
Front Panel	27
Rear Panel	28

Basic Operations

Playing	29
Recording	30

Recording

Recording One Channel/Watching Another	31
One-Touch Recording	32
Timer Recording	33-36
Rerecording (Tape Duplication)	37

Playing

Setting Up the VCR Plus+ Programming System	38-39
Timer Recording with the VCR Plus+ Programming System	40-41
Repeat Play	42
Real-Time Counter Memory	43
Time Search	44
Special Effects Playback	45
Automatic Operation Features	46

Additional Features

Multi-Channel Television Sound System (VRB661 only)	47-48
Hi-Fi Stereo Sound System (VRB661 only)	49
Blue Background	50
Child Lock	51

Information You May Need



Helpful Hints	52-53
Glossary	54
Specifications	55
Limited Warranty	56-57
Index	58
Accessories	60

Before Using Your VCR 5

Removing the Plastic Cover from the Front Panel

A thin, plastic cover may protect the front panel of your VCR. Before using the VCR, lift a corner of the plastic, then peel it off.

 Putting Batteries in the Remote Control

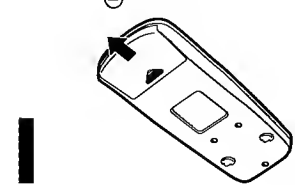

1 Remove the battery compartment lid on the bottom of the remote control by sliding it in the direction of the arrow.

2 Place two AA batteries inside the battery compartment with their + and - ends aligned as indicated.

3 Replace the battery compartment lid.

Using the Remote Control

- Point the remote control at the VCR, then press the VCR button when using the remote control to operate the VCR.
- Point the remote control at the TV, then press the TV button when using the remote control to operate the TV.
- Point the remote control at the Cable Box or Direct Broadcast System (DBS), then press the CBL/DBS button when using the remote control to operate the Cable Box or DBS.

Recording Prevention


Video cassette tapes have record tabs to ensure that recordings are not accidentally erased.

1 To prevent recording, break off the tab with a screwdriver.

2 To allow recording, cover the hole with cellophane tape.

VCR maintenance

- Use only tapes with the **VHS** mark.
- Remove any light adhesive stick-on notes from the video cassette tape before putting the tape in the VCR. Removable labels can jam the VCR.
- Periodic maintenance is required to maintain your VCR's excellent performance. This VCR has an Automatic Head Cleaner. However, the video heads will require replacement eventually. Only an authorized service center should perform this service.

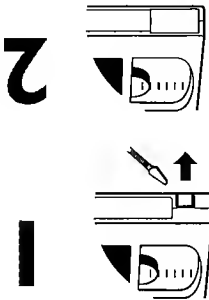

Helpful Hints


- Do not mix alkaline and manganese batteries.
- Do not mix old and new batteries.

6 Hookups without a Cable Box/Direct Broadcast System

The basic VCR/TV connection - antenna/cable to VCR to TV - is shown below. If you have a Cable Box or a Direct Broadcast System, please see pages eight-nine. If you have a Stereo TV, please see page 10. After you hook up the VCR, go to page 11 to turn on the VCR. (The VRB661 is illustrated here. The VRB461 has single AUDIO IN/OUT jacks.)


1

Disconnect the antenna or cable from your TV.

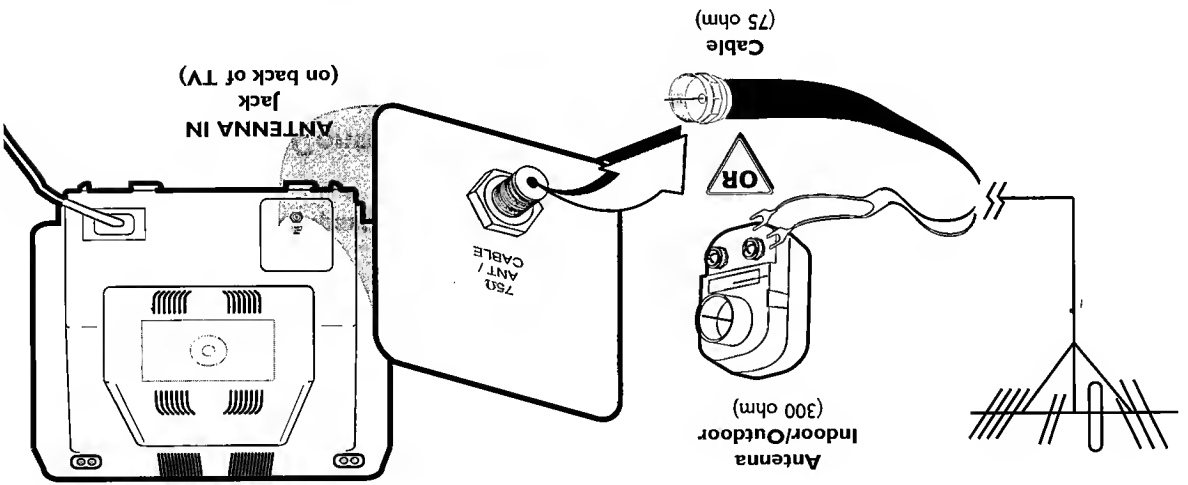

2


Connect the antenna or cable to the ANT(enna) IN jack of your VCR.

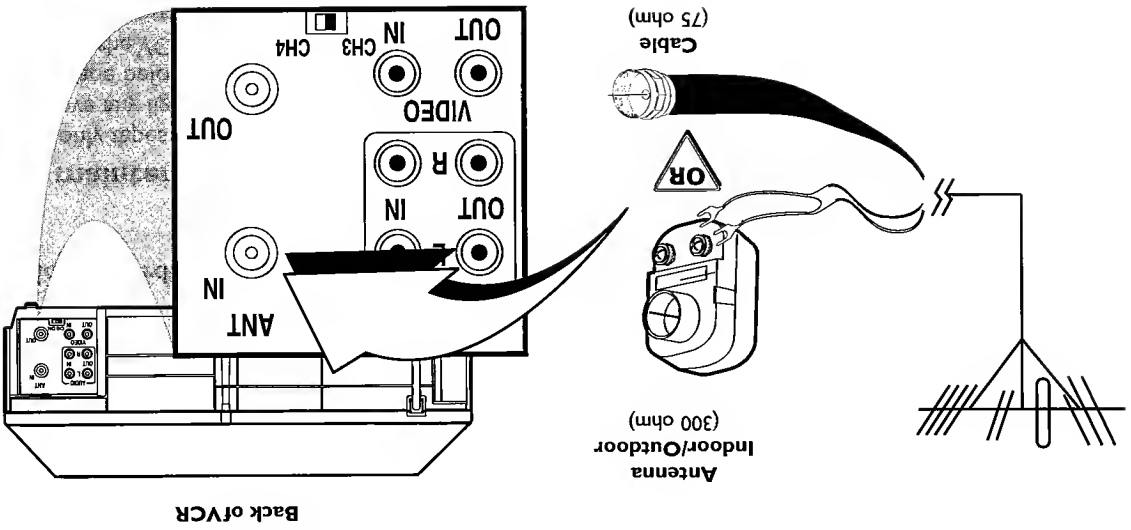

3

Hookups without a Cable Box/Direct Broadcast System (cont'd) 7

Connect the RF coaxial cable (supplied) to the **OUT** jack on the back of the VCR and to the **ANTENNA IN** jack on the TV. (You may use either a snap-on type (supplied) or screw-on type of coaxial cable, whichever you prefer.)

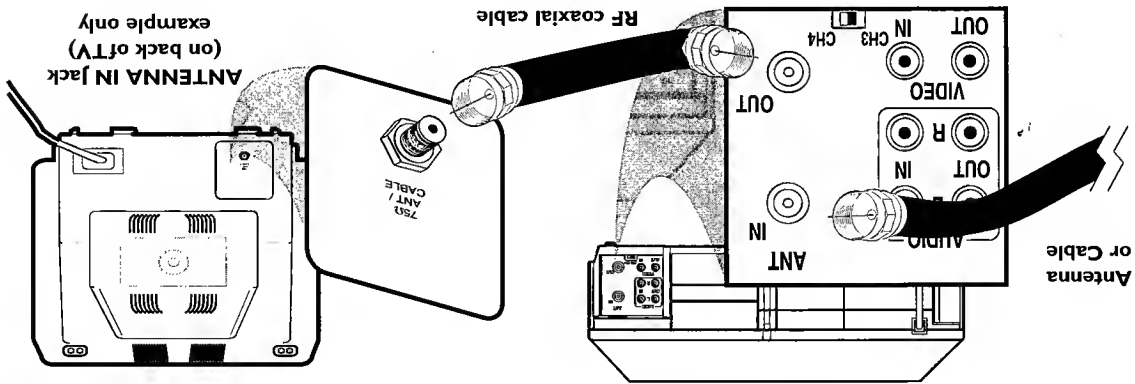


4

Plug in the TV and the VCR.

5

Set the **CH3/CH4** switch on the back of the VCR to **CH3** or **CH4**, whichever channel is not used or least used in your area. Set the TV to the same channel. For example, when playing a tape, if the **CH3/CH4** switch is set to **CH3**, the TV should be on channel 03.

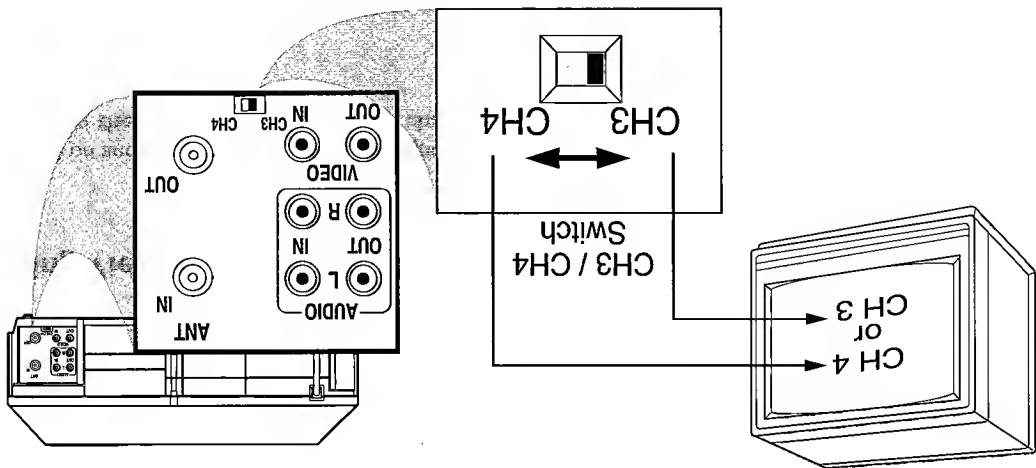


6

You are ready to turn on the VCR. Please go to page 11 before turning on the VCR.

8 Hookups with a Cable Box/Direct Broadcast System

There are two ways to connect your Cable Box/DBS to the VCR. With this connection:

- You may view any channel.
- You must select channels at the Cable Box/DBS. Channels cannot be changed at the VCR.
- You may not view a channel other than the one you are recording.
- You may not program channels at the VCR.
- You can only program a timer recording for one channel at a time. Set the TV and the VCR to the Cable Box/DBS output channel (channel 03 or 04). Set the CH3/CH4 switch to the same channel. Set your Cable Box/DBS to the output channel (channel 03 or 04). When you enter the channel you want to record in a timer recording, select channel 03 or 04 (the Cable Box/DBS output channel). (This is step 5 on page 34.) Leave the Cable Box/DBS on for a timer recording.
- If you use the VCR Plus+ Programming system, set the Cable/TV channel to 03 or 04 (Cable Box/DBS output channel) for every VCR Plus+ channel in the VCR Plus+ Cross Reference Map. You must set the Cable Box/DBS to the channel you want to record; leave the Cable Box/DBS on for the timer recording. Details are on page 39.

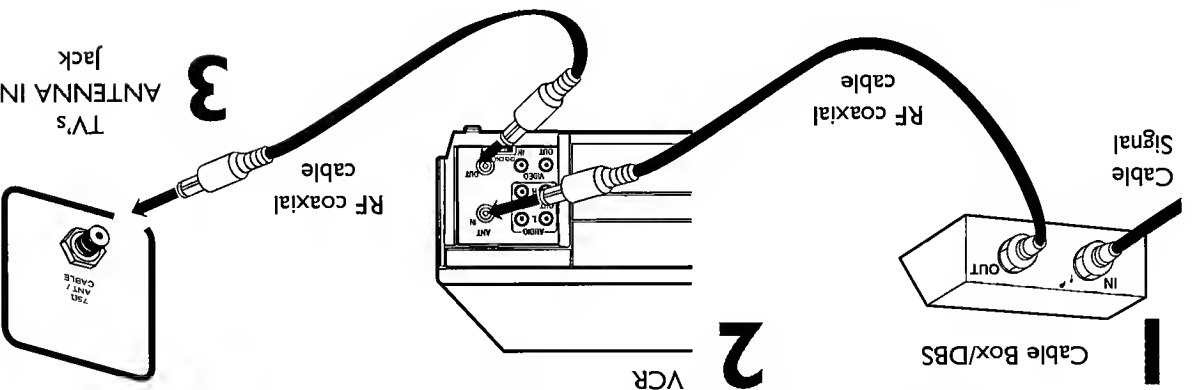

Connections

Connect a Cable signal to the **IN** jack on the Cable Box/DBS.

Use an RF coaxial cable (supplied) to connect the **OUT** jack on the Cable Box/DBS to the **ANT(enna)** **IN** jack on the VCR.

Use a second RF coaxial cable to connect the **OUT** jack on the VCR to the TV's **ANTENNA IN** jack.

Recording/Viewing Any Channel

With the VCR on and in VCR position (the VCR light will appear on the display panel), set the VCR to the Cable Box/DBS output channel (03 or 04).


Set the TV to the same channel to which you set the VCR. Set the CH3/CH4 switch on the VCR to the VCR to the same channel.

Select the channel you want to view/record at the Cable Box/DBS.

Hookups with a Cable Box/Direct Broadcast System (cont'd) 9

With this connection:

- You may watch one channel while recording another.
- You may not record scrambled channels.

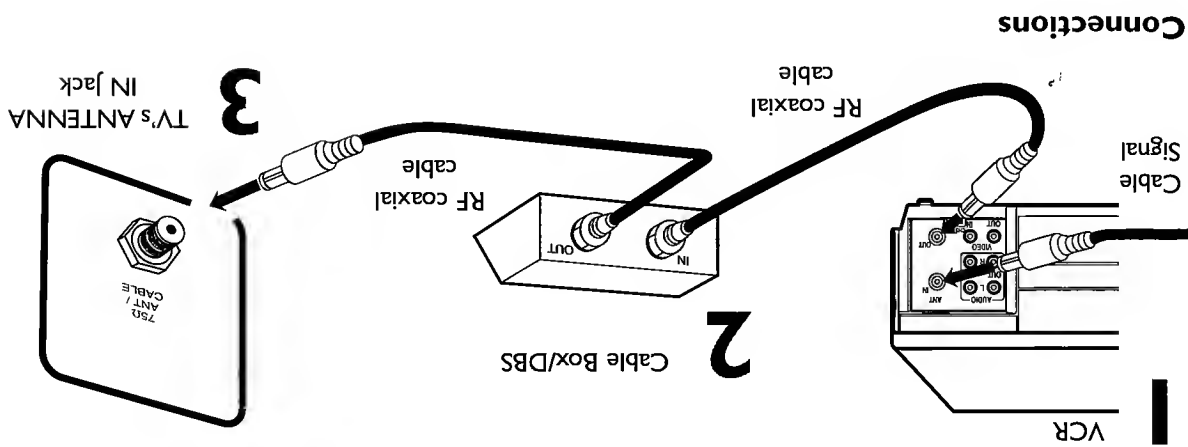

Connections

1 Connect a Cable signal to the VCR's ANT(enna) IN jack.

2 Use an RF coaxial cable (supplied) to connect the OUT jack on the VCR to the IN jack on the Cable Box/DBS.

3 Use a second RF coaxial cable to connect the OUT jack on the Cable Box/DBS to the ANTENNA IN jack on the TV.

Recording One Channel/Watching Another

1 Put the Cable Box/DBS on the same channel as the VCR's CH3/CH4 switch. Set the TV to the Cable Box/DBS output channel (03 or 04). Then, with the VCR in VCR position (the VCR light will appear on the display panel), use the CH(annel) ▲/▼ button to select the channel you want to record at the VCR. Start the recording.

2 Press the VCR/TV button once to put the VCR in TV position. (The VCR light will disappear.)


3 Select the channel you want to watch at the Cable Box/DBS.

4 To return to the channel you are recording, set the Cable Box/DBS to the same channel as the VCR's CH3/CH4 switch. Press the VCR/TV button so that the VCR is in VCR position again. The VCR light will appear on the display panel. The channel you are recording will appear on the screen. Press the STOP/▲ button to stop recording.

Helpful Hint

- When you play a tape, make sure the Cable Box/DBS is set to the same channel as the CH3/CH4 switch on the VCR. Set the TV to the Cable Box/DBS output channel (03 or 04).

10 Hookups with a Stereo TV

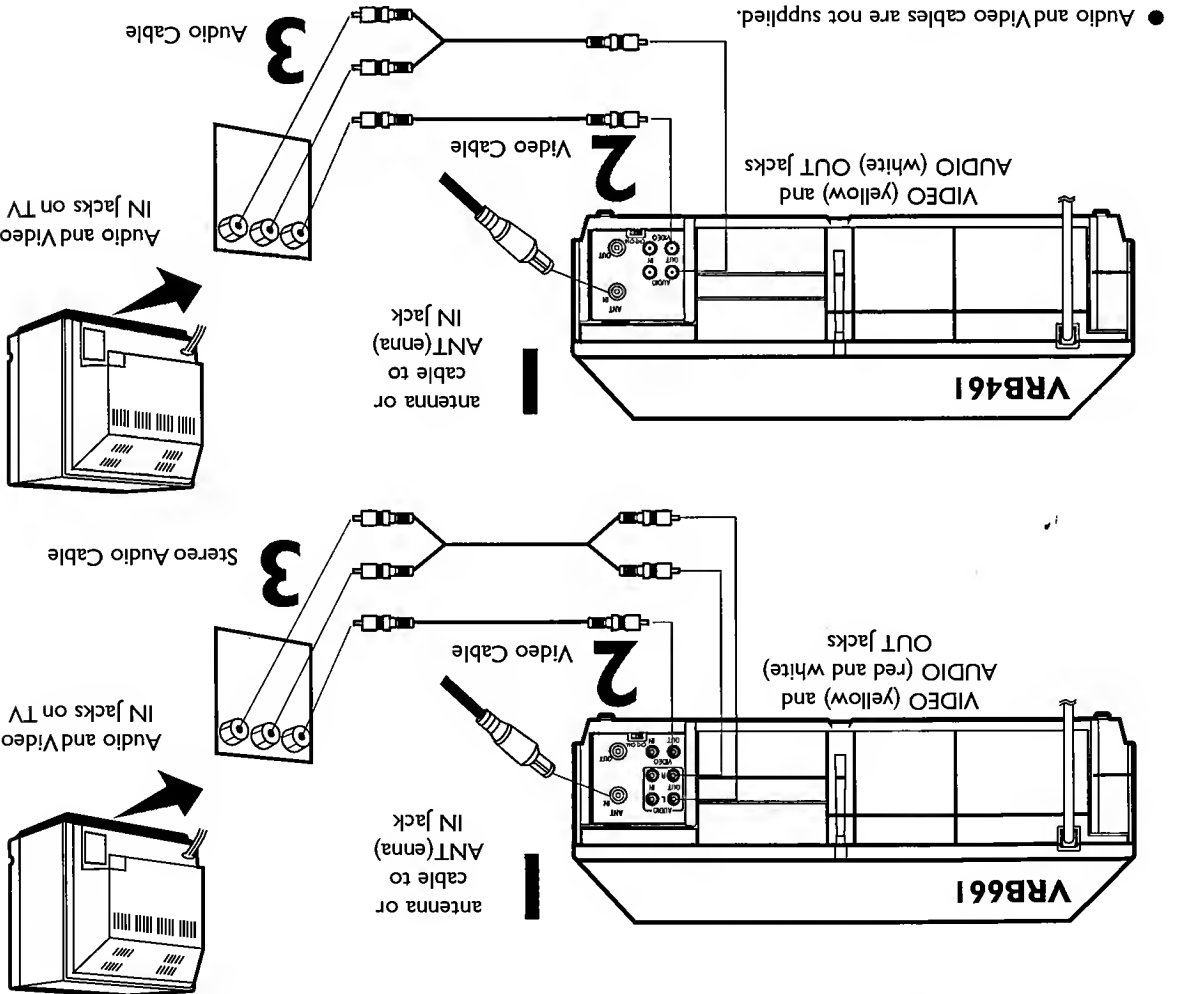

1 Connect the antenna or cable to the ANT(enna) IN jack on the back of the VCR.

2 Connect a video cable to the yellow VIDEO OUT jack on the back of the VCR. Then, connect the other end of the video cable to the VIDEO IN jack on your TV.

3 VRB661 Connect a stereo audio cable to the red and white AUDIO OUT jacks on the back of the VCR. Then, connect the other end of the audio cable to the AUDIO IN jacks on your TV.

3 VRB461 Connect an audio cable to the white AUDIO OUT jack on the back of the VCR. Then, connect

the other end of the audio cable to the AUDIO IN jack on your TV. (If your TV has Right and Left AUDIO IN jacks, you must use a "Y" splitter audio cable as illustrated to deliver audio to the TV's right and left channels.) This hookup will not give you stereo sound. To get stereo sound, use the connections on pages six - seven and select the channel to be viewed at the TV (with the VCR turned off).

4 Turn on your TV, making sure it is in Line Input mode. Please refer to your TV owner's manual for details.


Turning on Your VCR 11

2 Turn on the TV.

- Before turning on your VCR, make sure there are batteries in the remote control and the VCR and TV are connected correctly.
- Follow the steps on this page only when you plug the VCR power cord into the wall outlet for the first time.
- You can not program channels if you are using a Cable Box or a Direct Broadcast System.
- If you are not using a Cable Box/DBS, the clock may set itself automatically after you connect the antenna/Cable signal to the VCR and plug in the power cord. The time will appear on the display panel.


1 Press the VCR button, then press the POWER button. The VCR light and the PWR. (power) light will appear on the display panel.

2 Turn on the TV. Set it to the same channel as the CH3/CH4 switch on the back of the VCR. The display shown below will appear. (If the display does not appear, check your hookups, then follow the steps on page 12 to set up channels and page 20 to select a language.)

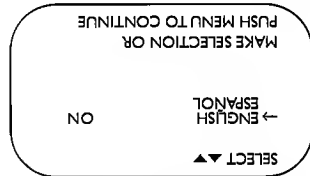


3 Within 60 seconds, press the PLAY/▲ button or the STOP/▼ button to select English or Spanish on-screen displays and menus.

4 Press the MENU button. The display shown below will appear.

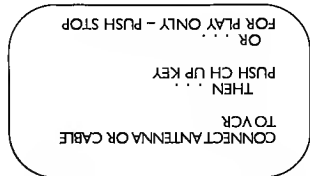

5 Within 60 seconds, press the CH(annel) ▲ button to begin automatic channel programming. AUTO CH PROGRAMMING IN PROCESS PLEASE WAIT will appear on the screen. The VCR will memorize all available channels. The channel numbers will appear on the display panel as the VCR scans channels. When all channels are memorized, CHANNELS ARE SET will appear on the screen briefly, then TV programming will appear. Now, when you press the CH(annel) ▲/▼ button, you'll only scan through channels that you receive.

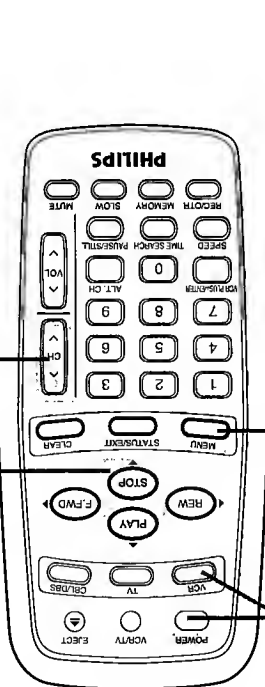

Helpful Hints


- To skip this feature and play a tape immediately, insert a tape with its record tab removed. Or, to skip step 3, press the MENU button. All on-screen displays will be in English. To skip step 5, press the STOP/▼ button. Channels will not be programmed, and CHANNELS NOT SET will appear on the screen.
- When you turn on the VCR again later, you may see a message regarding AUTO CLOCK. Details are on pages 15-18.
- If you try to program channels when there is no antenna or cable connected to the VCR, programming will appear to take place, but eventually a NO TV SIGNALS message will appear. Connect an antenna or cable to the VCR's ANT(enna) IN jack and press the CH(annel) ▲ button again. You may need to follow the steps on page 12.

12 Automatic Channel Setup

Although your VCR may automatically memorize the channels you receive when you turn it on for the first time, this function lets you set up the channels again.


1 Press the VCR button.

2 Press the MENU button.

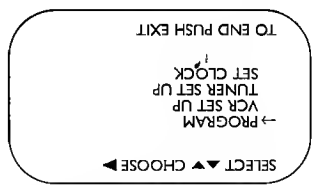


3 Press the PLAY/▲ button or the STOP/▼ button to select TUNER SET UP, then press the F.WD/► button.

VRB661 only

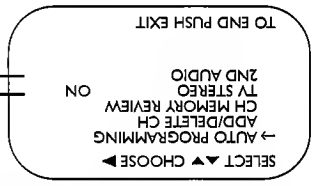


4 Press the PLAY/▲ button or the STOP/▼ button to select AUTO PROGRAMMING, then press the F.WD/► button. The VCR distinguishes between TV channels and cable channels, and the VCR will memorize all the channels you receive.

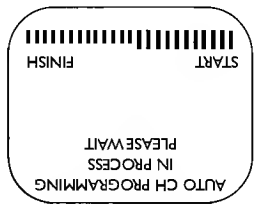

5 Wait for a few minutes while the VCR sets up the channels. When this is complete, CHANNELS ARE SET will appear on the screen. Then the programming of the lowest channel number placed in the VCR's memory will appear on the screen. Now when you press the CH(channel) ▲/▼ button, you will scan only through channels you receive.


Helpful Hints

- You can not enter the TUNER SET UP menu when you are in Line Input mode (channel 001 or 002). When you select channel 001 or 002, AV REAR or AV FRONT will appear on the screen briefly.
- You can not program channels if you are using a Cable Box or DBS.
- If you have an antenna, channels 2-69 will be available. If you have a cable connection, channels 1-125 will be available.

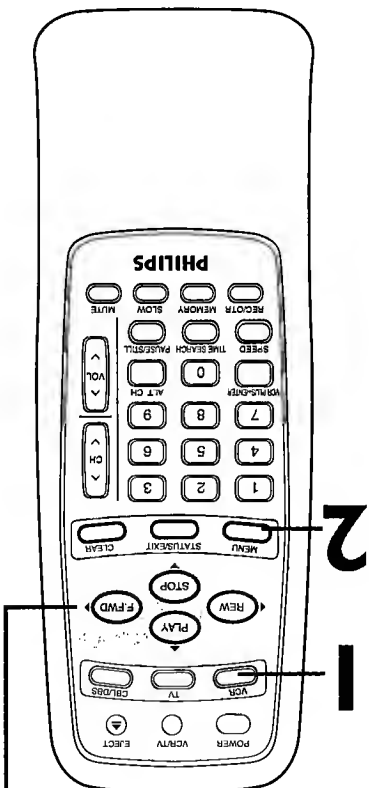

Adding/Deleting Channels

3-6

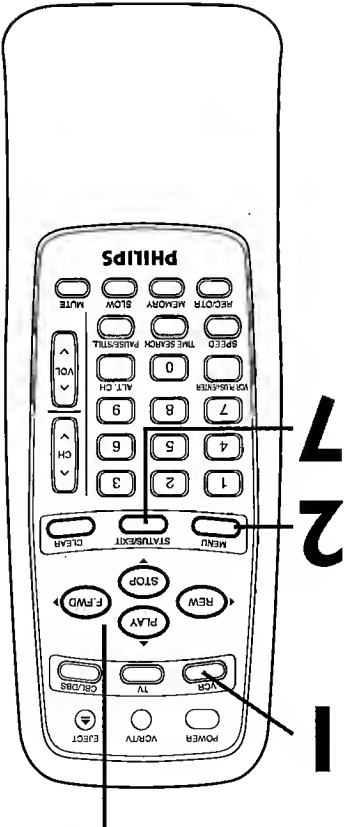

1 Press the VCR button.

2 Press the MENU button.

3 Press the PLAY/▲ button or the STOP/▼ button to select TUNER SET UP, then press the F.FWD/► button.

4 Press the PLAY/▲ button or the STOP/▼ button to select ADD/DELETE CH, then press the F.FWD/► button.

SELECT ▲ ADD/DELETE ▼	
124	DELETED
125	DELETED
1	→
2	ADDED
3	ADDED
TO END PUSH EXIT	

NOTE: If you have an antenna, channel numbers 2-69 will appear on the ADD/DELETE CH menu. If you have a cable connection, channels 1-125 will be available.

5 Press the PLAY/▲ button or the STOP/▼ button until the channel number you want to add or delete appears beside the arrow.

SELECT ▲ ADD/DELETE ▼	
16	DELETED
17	ADDED
18	→
19	ADDED
20	ADDED
TO END PUSH EXIT	

6 Press the F.FWD/► button to select ADDED or DELETED. Repeat steps 5 and 6 until you have added or deleted all the channels you wanted to add or delete.

7 Press the STATUS/EXIT button.

14 Automatic Channel Setup (cont'd)


Reviewing Memorized Channels

Press the VCR button.

1

Press the MENU button.


2

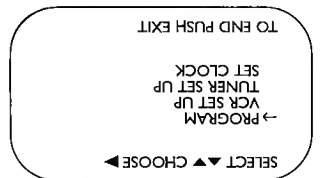

Press the PLAY/▲ button or the STOP/▼ button to select TUNER SET UP, then press the F.WD/► button.

3

VRB661 only

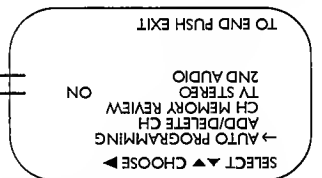


Press the PLAY/▲ button or the STOP/▼ button to select CH MEMORY REVIEW, then press the F.WD/► button. A list of programmed channels will appear on the screen. If all the programmed channels don't fit on the screen, press the F.WD/► button to see the remaining channels. Then press the REW(ind)/► button to return to the first screen of channels. If you do not press any buttons within 10 seconds, you will either go to the next screen of channels or you will return to the previous menu.

4


Press the STATUS/EXIT button once or twice to exit.

5

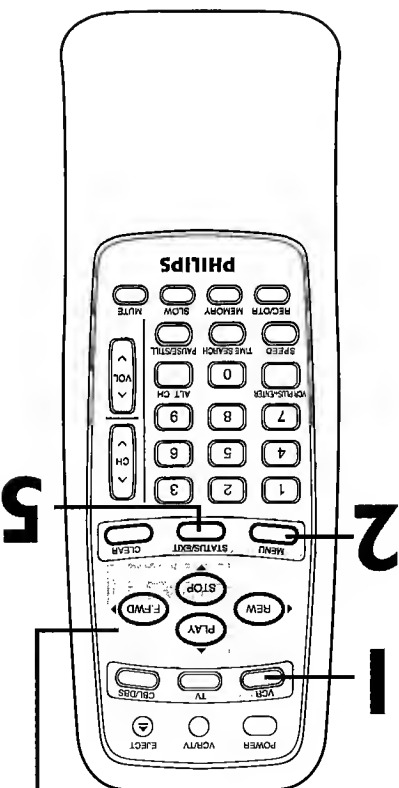

3-4

3-4

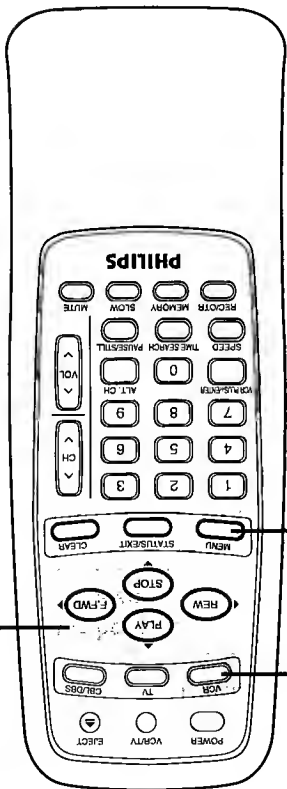

There are two ways to set the clock. With manual clock setting, you tell the VCR the current time. With automatic clock setting, the VCR gets the current time from your local PBS station. It keeps track of the time by constantly referring to the time broadcasted by your PBS station.

If you are using a Cable Box or Direct Broadcast System, you must set the clock manually.

Follow the instructions under either manual clock setting or automatic clock setting (page 17) to set the VCR's clock. Before you begin, make sure:

- The VCR is hooked up and turned on, and channels are programmed into the VCR's memory (see pages six-12).
- The VCR is in VCR position. The VCR light will appear on the display panel. If it does not, press the VCR/TV button once.

Do each step within 60 seconds of the previous step.

Manual Clock Setting

1 Press the VCR button.

2 Press the MENU button.

SELECT ▲▼ CHOOSE ►
PROGRAM
VCR SET UP
TUNER SET
SET CLOCK
TO END PUSH EXIT

3 Press the PLAY/▲ button or the STOP/▼ button to select SET CLOCK, then press the F.FWD/► button.

SET CLOCK
[ON]
SET MANUAL CLOCK
[ON]
DAYLIGHT SVG TIME
SET TIME ZONE
(AUTO)
TO CONTINUE PUSH MENU
SELECT ▲▼ CHOOSE ►
TO END PUSH EXIT

4 Press the PLAY/▲ button or the STOP/▼ button to select SET MANUAL CLOCK, then press the F.FWD/► button.

TIME ---:--:--
DATE ---/---/---
TO END PUSH EXIT

Instructions continue on page 16.

Helpful Hints

- To display the time on the TV screen, press the STATUS/EXIT button. Details are on page 25.
- Power failures that last for more than one minute can cause you to lose your clock setting if you set the clock manually. If this happens, reset the clock.

16 Setting the Clock (cont'd)

5

Press two Number buttons for the hour(s) and two Number buttons for the minute(s). Then press 1 for AM or 2 for PM. For example, for 2:15 PM, press 02, 15, 2.

- Enter a 0 before a single-digit number.
- Entries that do not match the VCR's internal calendar or clock will cause a question mark (?) to appear on the screen.
- To make corrections, press the CLEAR button until the space for the number you want to correct is flashing. Then enter the correct number.

6

TIME 02:15 PM
MONTH--/--/--
TO CORRECT PUSH CLEAR
TO END PUSH EXIT


Press two Number buttons for the month, two Number buttons for the day, and two Number buttons for the year. For example, for July 1, 2000, press 07, 01, 00. The day of the week will appear automatically.

7

TIME 02:15 PM
DATE 07/01/00
SAT.
TO CORRECT PUSH CLEAR
TO END PUSH EXIT

Press the STATUS/EXIT button to start the clock. The screen will return to the program you were watching. The time will appear on the VCR display panel.


5-6

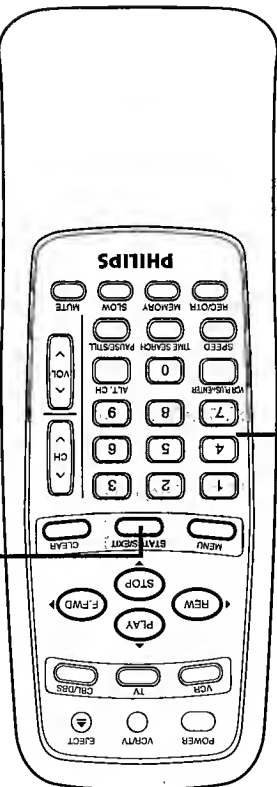

Automatic Clock Setting


1

Press the VCR button, then press the MENU button.

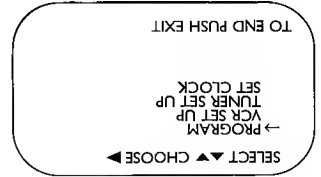


2

Press the PLAY/▲ button or the STOP/▼ button to select SET CLOCK, then press the F.FWD/► button.

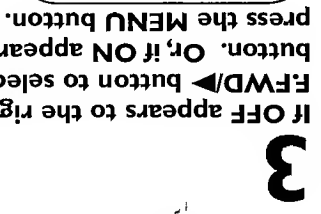

3

If OFF appears to the right of AUTO CLOCK, press the F.FWD/► button to select ON. Then, press the MENU button. Or, if ON appears to the right of AUTO CLOCK, press the MENU button. Go to step 4.

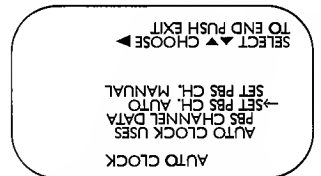

4


If you want the VCR to locate a local PBS station from which to take the time, press the PLAY/▲ button or the STOP/▼ button to select SET PBS CH. AUTO. Then press the F.FWD/► button. When the current time appears on the screen, you're finished. Press the STATUS/EXIT button. Or, you may be prompted to turn off the VCR. Turn off the VCR power, and leave it off for several minutes. When the current time appears on the VCR display panel, the clock is set. You may turn on the VCR again.

If you want to tell the VCR the PBS station from which to take the time, press the PLAY/▲ button or the STOP/▼ button to select SET PBS CH. MANUAL. Press the F.FWD/► button, then use the Number buttons to enter the channel number of the desired PBS station. When the current time appears on the screen, you're finished. Press the STATUS/EXIT button.

NOTE: CANNOT FIND PBS CLOCK DATA may flash on the screen. Press the PLAY/▲ button or the STOP/▼ button to choose SELECT NEW PBS CH., then press the F.FWD/► button. Use the Number buttons to enter the channel number of another PBS station. Or, press the PLAY/▲ button or the STOP/▼ button to select SET PBS CH. AUTO. Press the F.FWD/► button. You will be prompted to turn off the VCR. Turn off the VCR power, and leave it off for several minutes. When the current time appears on the VCR display panel, the clock is set. You may turn on the VCR again.

Helpful Hints

- If you enter on incorrect PBS channel number at step 4, press the CLEAR button to erase the incorrect channel number. If you have an antenna, you may select channels 2-69 at step 4. If you have a cable connection, you may select channels 1-125.
- The clock cannot be set automatically if you don't receive a channel that carries a time signal in your area. Set the clock manually.
- If there are only a few channels in your area that carry time signals, setting the clock automatically may take several minutes. If nothing happens even after you wait several minutes, set the clock manually.
- You cannot select AUTO CLOCK at step 3 during tape playback.

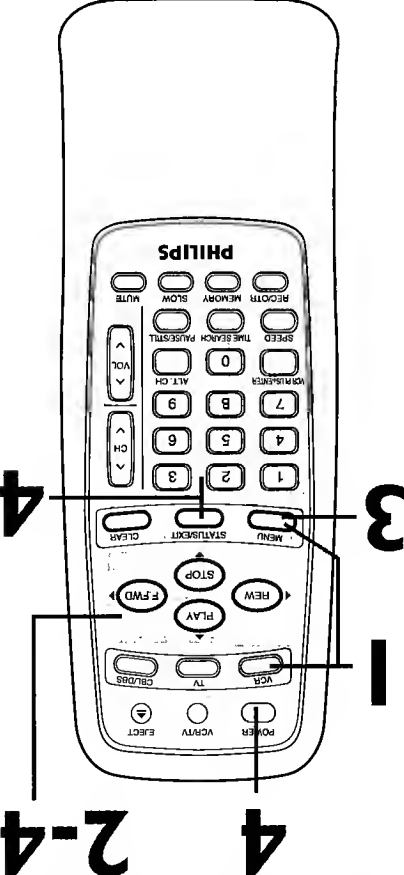


18 Setting the Clock (cont'd)

Time Zone


When using the AUTO CLOCK function, you can specify your time zone. That way, the VCR will update the clock according to your time zone.

Press the VCR button, then press the MENU button.

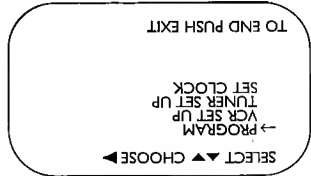


2

Press the PLAY/▲ button or the STOP/▼ button to select SET CLOCK, then press the F.FWD/► button.

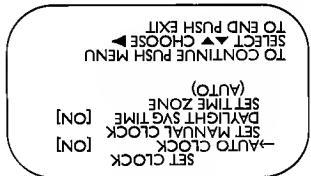


3

Press the PLAY/▲ button or the STOP/▼ button to select SET TIME ZONE, then press the F.FWD/► button.

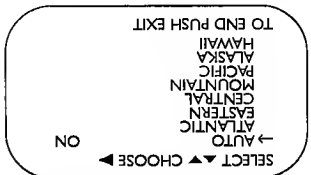

4

Press the PLAY/▲ button or the STOP/▼ button to select your time zone. ON will appear beside your choice.

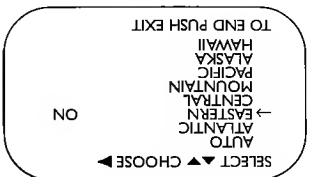


5

Press the STATUS/EXIT button.

Helpful Hints

- SET TIME ZONE will not appear in the menu if AUTO CLOCK is set to OFF.
- You may need to turn off the VCR to enable the VCR to set its clock for your time zone.

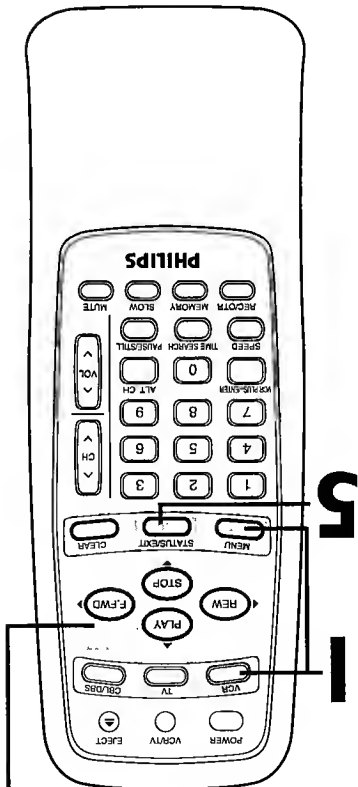

2-4

Daylight-Savings Time 19

You may program the VCR so its clock will automatically move forward one hour in April and turn back one hour in October. Daylight-Savings Time is set to ON when you receive your VCR. Turn Daylight-Savings Time ON or OFF by following the steps below. Before you begin:

- Make sure the clock is set.

1 Press the VCR button.

2 Press the MENU button.

SELECT ▲▼ CHOOSE
→ PROGRAM
TUNER SET UP
SET CLOCK
TO END PUSH EXIT


3 Press the PLAY/▲ button or the STOP/▼ button to select SET CLOCK, then press the F.FWD/► button.

SET CLOCK
→ AUTO CLOCK [ON]
SET MANUAL CLOCK [ON]
DAYLIGHT SVGTIME [ON]
SET TIME ZONE (AUTO)
TO CONTINUE PUSH MENU
SELECT ▲▼ CHOOSE
TO END PUSH EXIT

4 Press the PLAY/▲ button or the STOP/▼ button to select DAYLIGHT SVGTIME. Then, press the F.FWD/► button so that OFF (or ON) appears beside DAYLIGHT SVGTIME.

SET CLOCK
→ AUTO CLOCK [ON]
SET MANUAL CLOCK [ON]
DAYLIGHT SVGTIME [ON]
SET TIME ZONE (AUTO)
TO CONTINUE PUSH MENU
SELECT ▲▼ CHOOSE
TO END PUSH EXIT

5 Press the STATUS/EXIT button.

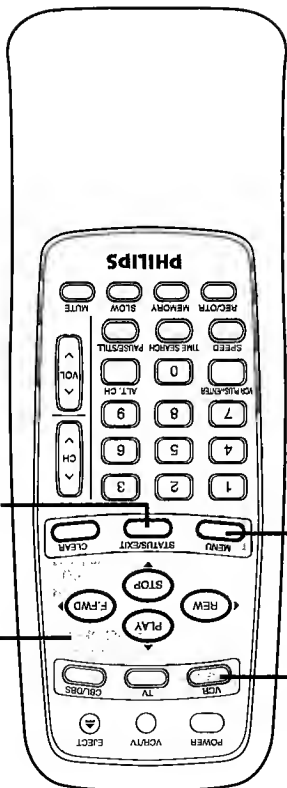

3-4


20 Language Selection

Follow the steps below to change the language of the on-screen displays and menus.

1 Press the VCR button.


2

Press the MENU button.

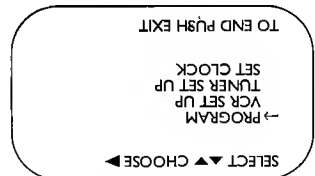

3


Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/► button.

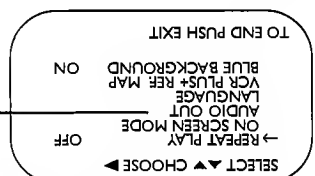

VRB661 only

4

Press the PLAY/▲ button or the STOP/▼ button to select LANGUAGE, then press the F.FWD/► button.

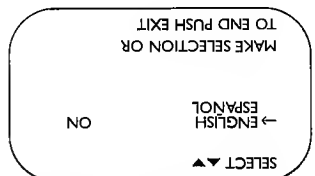

5


Press the PLAY/▲ button or the STOP/▼ button to select English or Spanish on-screen displays and menus.

6

Press the STATUS/EXIT button.


Helpful Hint

- If you accidentally select Spanish and need English:
1. Press the VCR button.
2. Press the MENU button.
3. Press the PLAY/▲ button or the STOP/▼ button to select PREPARE EL VCR, then press the F.FWD/► button.
4. Press the PLAY/▲ button or the STOP/▼ button to select LENGUA-JE, then press the F.FWD/► button.
5. Press the PLAY/▲ button or the STOP/▼ button to select ENGLISH.
6. Press the STATUS/EXIT button.

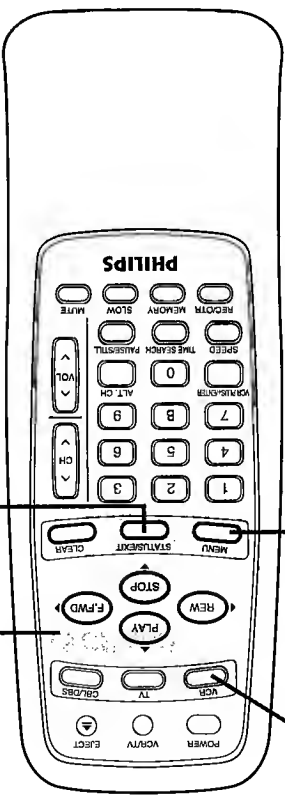

Setting the Remote to Operate a TV 21

1 & 6 Find your TV code.

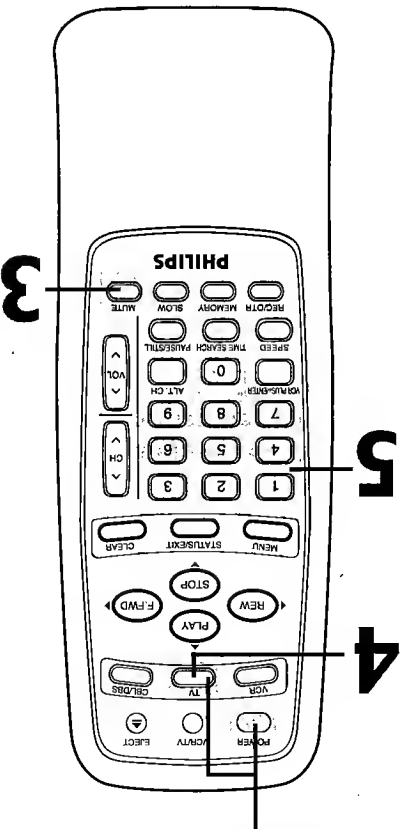

Your VCR remote control **may** operate your TV. If the remote control doesn't operate your TV now, follow the steps below.

1 Point the remote control at your TV and press the TV button. Then, press the **POWER** button. If your TV turns on or off, try the other TV buttons (see pages 23-24). If your TV doesn't turn on or off, or if the other buttons don't work, go to step 2.

2 Find the brand of your TV on the list below, and remember the two-digit number beside it.

TV CODES	
EMERSON	.14
PHILCO	.14
FISHER	.11
GE	.10
GOLDSTAR	.10
HITACHI	.12
JVC	.05
MAGNAVOX	.01, 02, 03
MARANTZ	.13
MITSUBISHI	.13
MONTGOMERY WARD	.14
PANASONIC	.07
PANASONIC-GA00	.07
TOSHIBA	.08
SONY	.09
SHARP	.16
SEARS	.08, 11
SANYO	.11
SAMSUNG	.17
RCA	.10
QUASAR	.04
PHILIPS MAGNAVOX	.01, 02, 03
ZENITH	.06, 15

Press the **MUTE** button.

Within 30 seconds, press the TV button.

Within 30 seconds, press the Number buttons to enter the two-digit code for your TV brand. For example, if you have a Zenith TV, press Number buttons 0, 6.

Repeat step 1. If the remote control works your TV, you're finished. If the remote control still doesn't work your TV, repeat steps 3-5, using a different code for your brand (if available).

There is no guarantee that the remote will work your TV.

- ### Helpful Hints
- The remote control may only operate some features of your TV. For example, the remote control may turn on the TV power, but it may not change channels at the TV.
 - If you can not change the channels at the TV using the Number buttons, press the VCR PLUS+/ENTER button after you press the Number buttons. It may change channels at the TV.
 - When you replace the batteries in the remote control, you must program the remote control again.
 - Remember to point the remote control toward the TV during steps 1-6.

186
2 Find your code.

Turn on the Cable Box/DBS. Then, point the remote control at your Cable Box/DBS and press the CBL/DBS button. Then, press the **POWER** button. If your Cable Box/DBS turns off, try the other Cable Box/DBS buttons (see pages 23-24). If your Cable Box/DBS doesn't turn off, or if the other buttons don't work, go to step 2.

CABLE BOX CODES

MAGNAVOX.....94,95 RCA.....97 SONY.....98

Within 30 seconds, press the Number buttons to enter the two-digit code for your Cable Box or DBS. For example, if you have a Zenith Cable Box, press Number buttons 0,7.

A detailed line drawing of a Philips remote control. The remote is rectangular with rounded corners. At the top, the brand name 'PHILIPS' is printed in reverse. Below it, there are several function buttons: 'MUTE', 'SLOW', 'MICROH', 'RELOCN', 'SPEED', 'TIME RECALL', 'PAUSE/STILL', 'VOLUME UP', 'VOLUME DOWN', 'ALF. CH', '9', '8', '7', '6', '5', '4', '3', '2', '1'. Below these are three buttons: 'MENU', 'STATUS/EXIT', and 'CLEAR'. In the center, there are four circular buttons: 'STOP', 'F.PWD', 'PLAY', and 'REW'. At the bottom, there are three buttons: 'CH', 'TV', and 'VCR'. Below these are three more buttons: 'POWER', 'VCR/TV', and 'EJECT'. Three numbered callouts are present: '3' points to the 'MUTE' button, '4' points to the 'CH' button, and '5' points to the '1' button.

**There is no guarantee
that the remote
will work your
Cable Box or DBS.**

- The remote control may only operate some features of your Cable Box/DBS. For example, the remote control may turn off the Cable Box/DBS power, but it may not change channels at the Cable Box/DBS.
- If you can not change the channels at the Cable Box by using the Number buttons, press the VCR PLUS+/ENTER button after you press the Number buttons. It may change channels at the Cable Box.
- When you replace the batteries in the remote control, you will have to program the remote control again.
- Remember to point the remote control toward the Cable Box/DBS during steps 1-6.
- Some Cable Boxes can only be turned on at the Cable Box.

EJECT Button
Press to eject the tape.

POWER Button

Press to turn on or off the VCR, TV, Cable Box, or Direct Broadcast System. (You must first press the VCR, TV, or CBL/DBS button.) Press and hold to set the Child Lock. Details are on page 51.

VCR Button

Press to operate the VCR.

PLAY/▲ Button

Press to play a tape; press to release Slow, Search, or Still mode and return to normal playback. Details are on page 45. Press to select an item in the VCR menu. Or, if you have a Magnavox TV, press to select an item in the TV menu. When in TV mode to select an item in the TV menu.

MENU Button

Press to access the VCR menu. Or, if you have a Magnavox, Philips, or Philips Magnavox TV, press the TV button, then press the MENU button to display the TV menu.

Number Buttons

Press to select channels at the VCR, TV, Cable Box, or Direct Broadcast System; use to set up VCR features (such as the clock).

Cable Users ●

At the VCR, enter channel numbers as a two-digit number for the quickest results. For example, to select channel 6, press 0,6. If you only press the Number 6 button, channel 6 will be selected after a brief delay. (There also may be a brief delay when you select channels 10, 11, and 12.) If you want to select channels 100 and above, enter channel numbers as a three-digit number. For example, to select channel 117, press 1,1,7. Enter channel numbers as a two-digit number for the quickest results. You may only select channels 2-69. For example, to select channel 5, press 0,5. If you only press the Number 5 button, channel 5 will be selected after a brief delay.

SPEED Button

Press to select the recording speed (SP or SLP). Details are on pages 35 and 54.

REC(ord)/OTR Button

Press once to start a recording. Details are on page 30. Or, press repeatedly to start a One-Touch Recording. Details are on page 32.

MEMORY Button

Press to memorize a tape position at which the real-time counter was set to 0:00:00. Details are on page 43.

PAUSE/STILL Button

While recording, press to temporarily stop the recording (pause). Press a second time to resume normal recording. Details are on page 30. You can not pause a One-Touch Recording. During playback, press to freeze the picture (still). Press again to resume playback. Details are on page 45.

SLOW Button

During tape playback, press to view the picture in slow motion. Press again to resume normal playback. Details are on page 45.

MUTE Button

Press to eliminate the sound at your TV. Press again to restore the volume.

VOL(ume) ▲/▼ Button
Press to adjust the volume of your TV.

Helpful Hint

- Press the VCR button before pressing VCR feature buttons; press the TV button before pressing TV feature buttons; press the CBL/DBS button before pressing Cable Box/Direct Broadcast System feature buttons.

VCR/TV Button

Use to select the signal that your TV receives.

VCR Position

Use to watch a tape, to watch a program while recording it, or to change channels at the VCR. If the VCR light appears on the display panel of the VCR, it is in VCR position.

TV Position

Use to watch TV (changing channels at the TV) or to watch one program while recording another. Details are on page 31. If the VCR light doesn't appear on the display panel of the VCR, it is in TV position.

REW(ind)/▶ Button

When tape playback is stopped, press to rewind the tape at high speed. During playback, press to rewind the tape while the picture stays on the screen. Details are on page 45. Or, if you have a Magnavox, Philips, or Philips Magnavox TV, use the REV(ind)/▶ button to adjust the controls in the TV menu.

STOP/▶ Button

Press to stop the tape. Press to select an item in the VCR menu. Or, if you have a Magnavox, Philips, or Philips Magnavox TV, press when in TV mode to select an item in the TV menu.

VCR PLUS+/ENTER Button

Press to set a timer recording with the VCR Plus+ programming system. Details are on pages 38-41. Or, press after pressing the Number buttons to select a channel at the TV or the Cable Box. Details are on pages 21-22.

TIME SEARCH Button

Press to fast forward or rewind the tape a specific length of time. Details are on page 44.

ALT. CH (Alternate Channel) Button

Press while in TV position to return to the TV channel you were viewing immediately before switching to your current channel. This button does not have an effect on channels changed at the VCR.

CH(annel) ▲/▼ Button

Press to change channels at the VCR, TV, Cable Box, or Direct Broadcast System.

STATUS/EXIT Button

Press to access or remove the on-screen status display. Details are on page 25. Press to exit on-screen menus. Or, if you have a Magnavox, Philips, or Philips Magnavox TV, press the TV button, then press the STATUS/EXIT button to access or remove a TV status display or to remove the TV menu.

CLEAR Button

Press to erase incorrect data when programming VCR functions. Also, press to reset the real-time counter. Details are on page 43.

F.FWD(Fast Forward)▶ Button

When playback is stopped, press to fast forward the tape at high speed. During playback, press to fast forward the tape while the picture stays on the screen. Details are on page 45. Or, if you have a Magnavox, Philips, or Philips Magnavox TV, use to adjust the controls in the TV menu.


CBL/DBS Button

Press to operate the Cable Box or Direct Broadcast System. Details are on page 22.

Helpful Hint

Buttons with a shaded description may also operate features of your TV, Cable Box, or Direct Broadcast System.

TV Button
Press to operate the TV.
Details are on page 21.

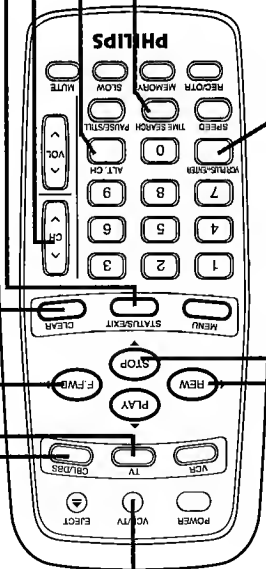

A status display will appear when you press the STATUS/EXIT button or certain function buttons. The contents of the status display will vary. To choose the status display mode, follow the steps below.

ON: If you select STATUS ON, then select COUNTER ONLY

● Whenever you press the STOP/▲ button or the PLAY/▼ button, the status display will appear for five seconds. After five seconds, only the counter will remain on the screen. You must press the STATUS/EXIT button to remove it. Portions of the status display also may appear when you press other function buttons.

OFF: If you select STATUS ON, then select COUNTER ONLY

● Whenever you press the STOP/▲ button or the PLAY/▼ button, the status display will appear for five seconds. Portions of the status display also may appear when you press other function buttons.

IF YOU SELECT STATUS OFF:


● The status display will not appear when you press function buttons. You must press the STATUS/EXIT button to see the status display.

Press the VCR button, then press the MENU button.

2 Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/► button.

3 Press the PLAY/▲ button or the STOP/▼ button to select ON SCREEN MODE, then press the F.FWD/► button.


4 Press the PLAY/▲ button or the STOP/▼ button to select STATUS, then press the F.FWD/► button so that OFF (or ON) appears beside STATUS.

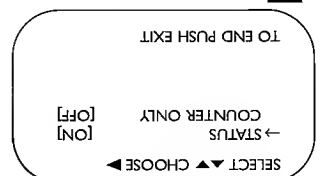

5 If you set STATUS to OFF, go to step 6. If you set STATUS to ON, press the PLAY/▲ button or the STOP/▼ button to select COUNTER ONLY, then press the F.FWD/► button so that OFF (or ON) appears beside it.

Press the STATUS/EXIT button.


Status Display (example only)

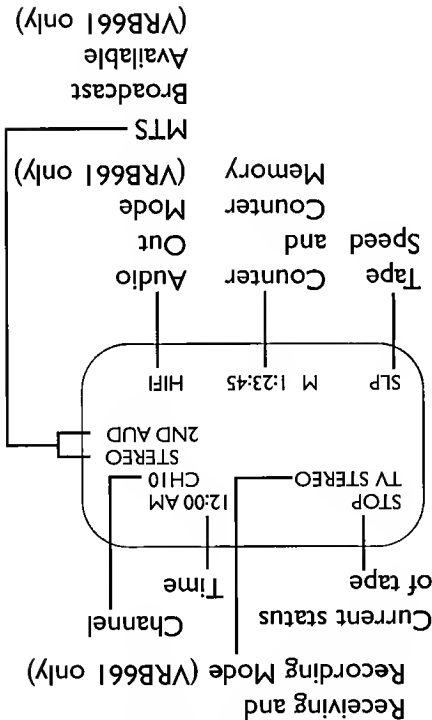


Helpful Hint

- You may not access a status display when viewing a still picture, during slow motion playback, or during a search.
- A status display may not be available when you are watching TV if Blue Background is set to OFF. Details are on page 50.

26 VCR Display Panel

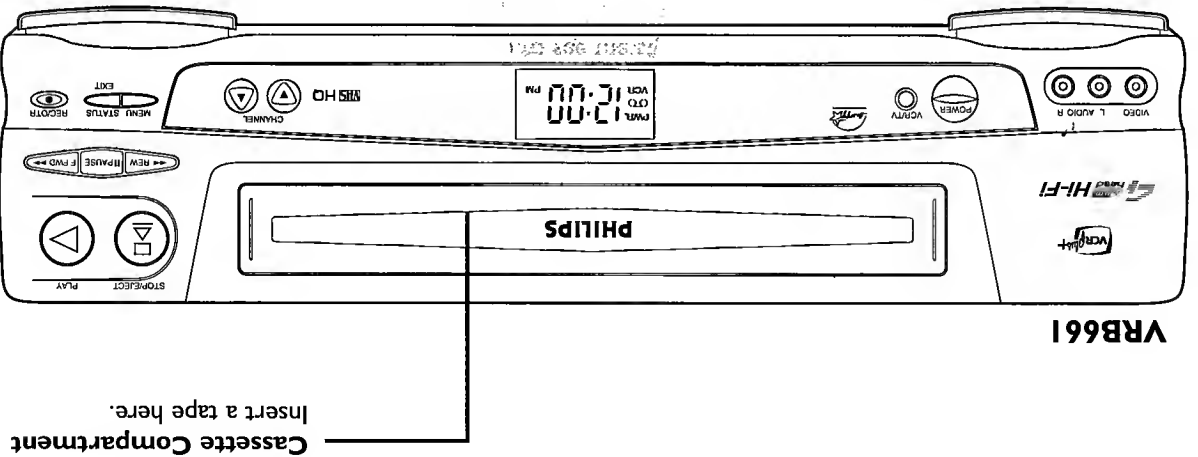

VRB661

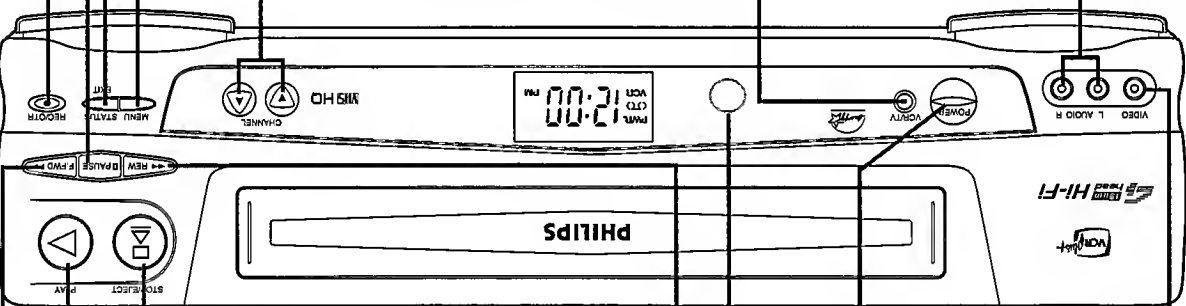

FWD (Fast Forward) Button — When playback is stopped, press to fast forward the tape at high speed. During tape playback, press to fast forward the tape while the picture stays on the screen. Details are on page 45. Press to select an item in the VCR menu or to change the setting of a menu item.

REW(ind) Button — When playback is stopped, press to rewind the tape at high speed. During playback, press to rewind the tape while the picture stays on the screen. Details are on page 45. Press to return to a previous VCR menu.

PLAY Button — Press to play a tape. Press to release Slow, Search, or Still mode and return to playback. Details are on page 45. Press to select an item in the VCR menu.

STOP/EJECT Button — Press once to stop the tape. When playback is stopped, press to eject the tape. Press to select an item in the VCR menu.

Remote Sensor — Receives a signal from your remote control so you can operate your VCR from a distance.

POWER Button — Press to turn the VCR power on and off.

VIDEO In Jack — Connect a video cable coming from the video out jack of a camcorder, another VCR, or an audio-visual source (laser disc player, video disc player, etc.) here. Details are on page 37.

VRB661 —

AUDIO In Jacks — Connect audio cables coming from the audio out jacks of a camcorder, another VCR, or an audio source here. Details are on page 37. The VRB661 is shown here. The VRB461 has only one AUDIO In Jack.

VCR/TV Button — Press to select VCR or TV position.

VCR Position — Use to watch a tape, to watch a program while recording it, or to watch a TV program (changing channels at the VCR). When the VCR light appears on the display panel, the VCR is in VCR position.

TV Position — Use to watch TV (changing channels at the TV) or to watch one program while recording another. When the VCR light does not appear on the display panel, the VCR is in TV position.

CHANNEL (▲/▼) Buttons — Press to change channels at the VCR. Or, press to adjust the tracking of a tape during normal playback or slow motion playback. Also, press to remove vertical jitter in a Still picture.

MENU Button — Press to access the VCR menu.


STATUS/EXIT Button — Press to access or remove the on-screen status display. Details are on page 25. Press to exit on-screen menus.

PAUSE Button — While recording, press to pause the recording. Press again to resume recording. Details are on page 30. You can not pause a One-Touch Recording. During tape playback, press to freeze the picture. Press again to resume playback. Details are on page 45.

REC(ord)/OTR Button — Press once to start a recording. Press repeatedly to start a One-Touch Recording. Details are on page 32.

Helpful Hint

- When you press the STOP/EJECT button, the PLAY button, the REW(ind) button, or the FWD button on the VCR, they light up for five seconds.

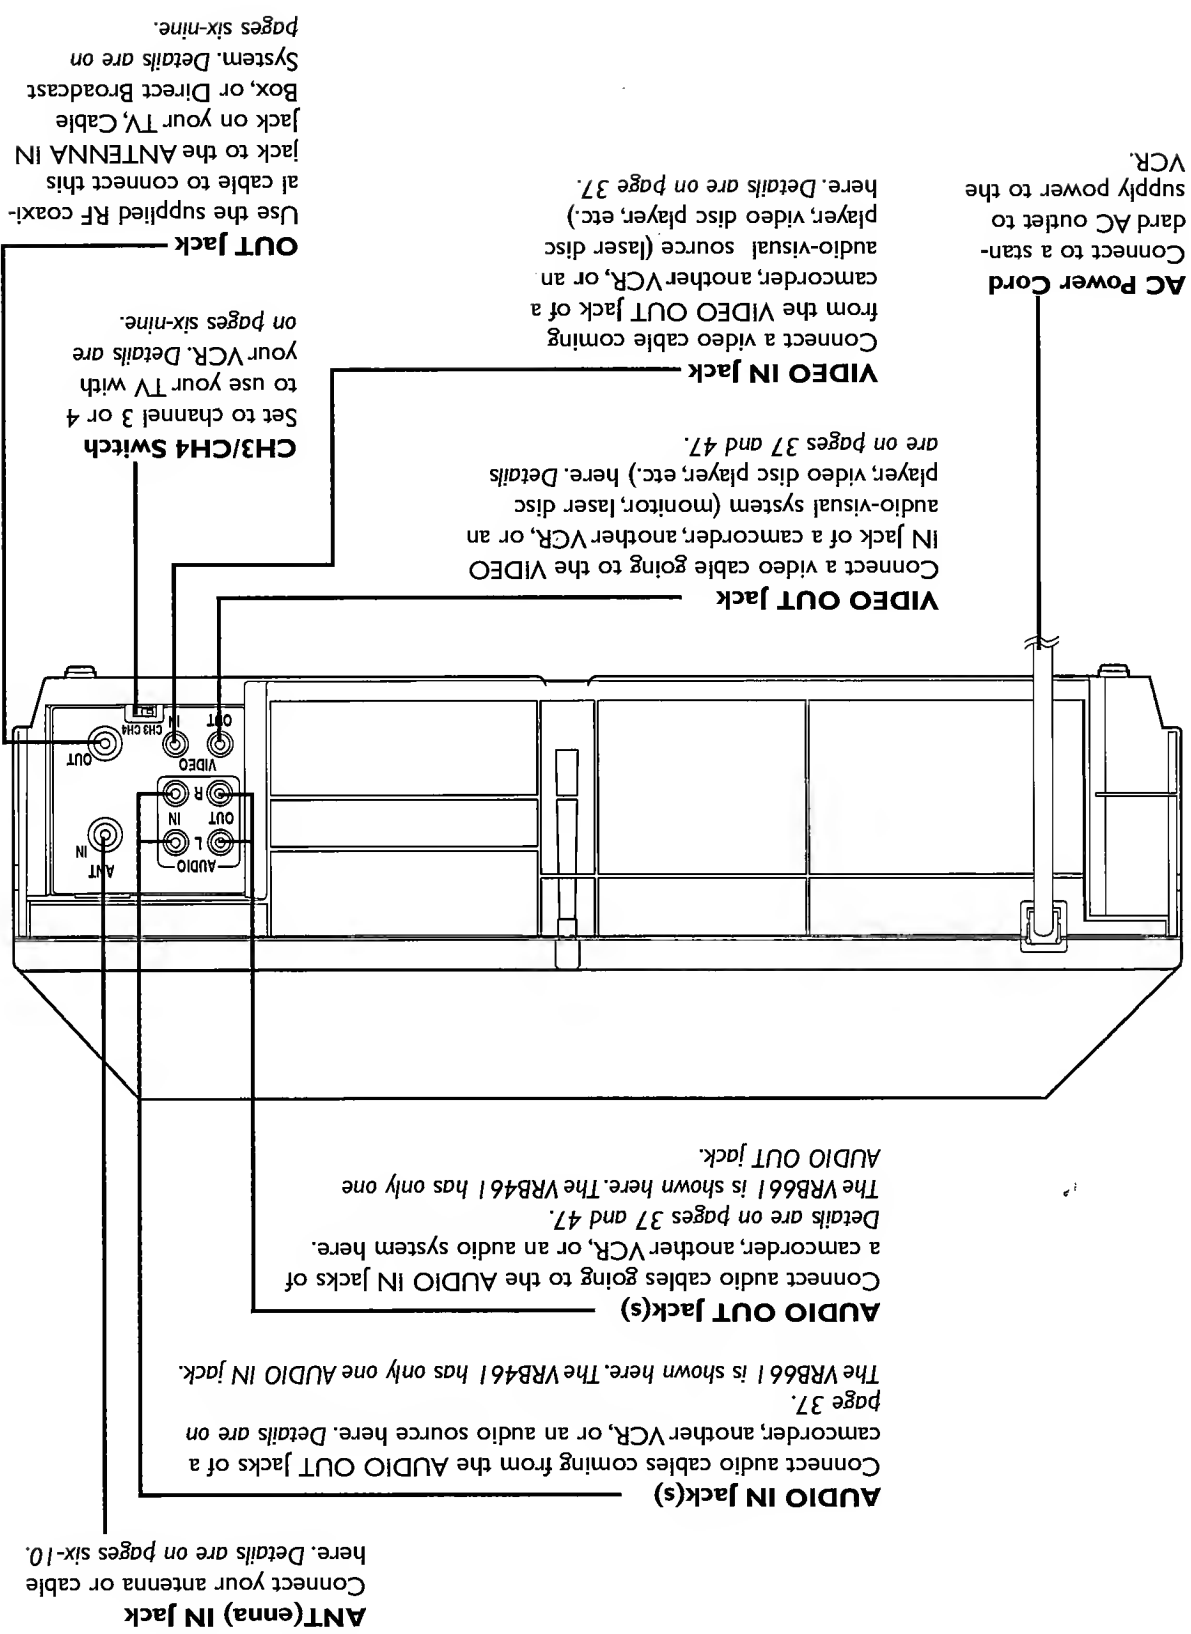

Read and follow the steps below to play a tape.

1 Turn on the TV and set it to channel 3 or 4, whichever channel the CH3/CH4 switch on the back of the VCR is set to.


2 Insert a tape in the VCR. The PWR, VCR, and Cassette-Inside lights will appear on the display panel. If the tape's record tab has been removed, playback will start automatically.

3 If playback does not start automatically, press the VCR button, then press the PLAY/▲ button.

4 Press the STOP/▼ button to stop playback.

5 Press the REW(ind)/▶ button to rewind the tape.

6 Press the EJECT button to remove the tape.

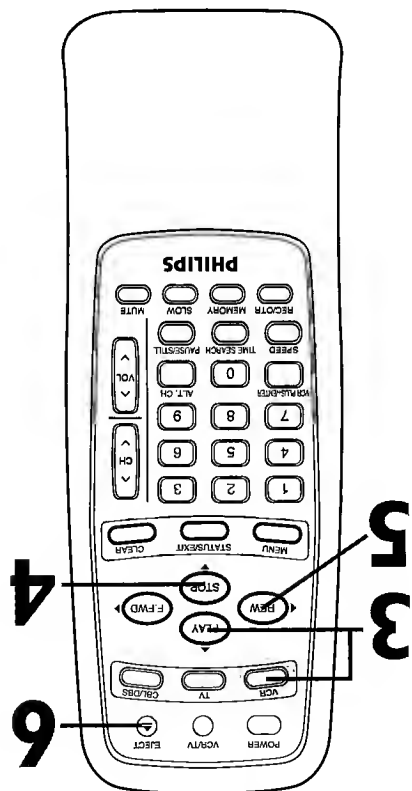

1 Turn on the TV.

2 Insert a tape in the VCR.

S-VHS Quasi Play Back (SQPB)

This unit has a SQPB function that allows you to view a tape play the same as a tape recorded in normal format. This unit detects whether the tape is recorded in S-VHS format or in normal format.

- If the tape you want to play is already in the VCR, make sure the VCR power is on and the VCR is in VCR position. (The VCR light will appear on the display panel. If it does not, press the VCR/TV button once.) Press the VCR button, then press the PLAY/▲ button.
- Other playback options and features are on pages 42-49.
- When you play a tape recorded in S-VHS format on this unit, you can not get the high resolution that would be available on an S-VHS VCR. Noise lines (black and white streaks) may appear on the picture. If REPEAT PLAY is set to ON, playback will begin automatically, even when the record tab is intact.

Helpful Hints

30 Recording

Read and follow the steps below to record a television program.

1 Turn on the TV and set it to channel 3 or 4, whichever channel the CH3/CH4 switch on the back of the VCR is set to.

2 Insert a tape with its record tab intact in the VCR.

3 Press the VCR button.

4 If the VCR light appears on the display panel, go to step 5. If the VCR light does not appear, press the VCR/TV button once.

5 Press the SPEED button until the desired tape speed appears briefly on the screen. (Details about tape speed are on page 35.)

6 Use the CH(channel) ▲/▼ button or the Number buttons to select the channel to be recorded.


7 Press the REC(ord)/OTR button once to start recording. The REC(ord) light will appear.


8 To pause the recording, press the PAUSE/STILL button once. The REC(ord) light will flash. To resume recording, press the REC(ord)/OTR button or press the PAUSE/STILL button again. The REC(ord) light will come on again.

9 To stop recording, press the STOP/▲ button.

- If you press the REC(ord)/OTR button when there is not a tape in the VCR, NO CASSETTE will flash on the screen.
- If you press the REC(ord)/OTR button while a tape without a record tab is in the VCR, the VCR will eject the tape and PROTECTED CASSETTE CANNOT RECORD will flash on the screen.
- Other recording options are on pages 31-37.
- You can change the tape speed during a recording, but some distortion will appear on the tape.
- The VCR will record in a preset volume.

Helpful Hints

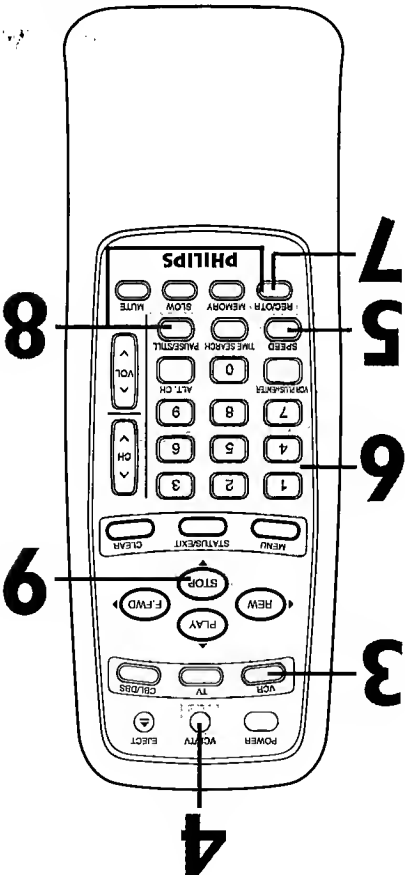

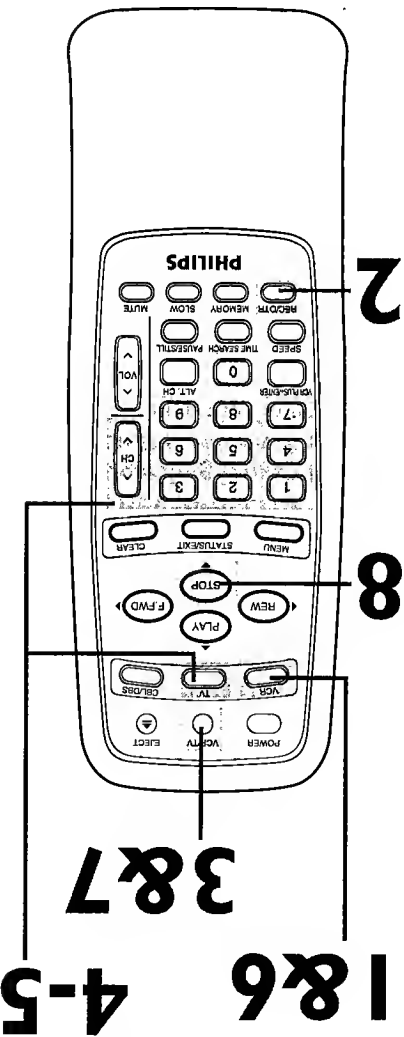

Press the VCR button.

Press the REC(ord)/OTR button to start a recording of the current channel. (See page 30.)

Press the VCR/TV button to put the VCR in TV position. The VCR light will disappear from the VCR's display panel.

Press the TV button, then press the CH(annel) ▲/▼ or Number buttons to select the channel you want to watch at the TV. (If the VCR remote control doesn't operate your TV, use the TV remote control to select the channel.)

To return to the channel being recorded, press the TV button, then use the Number buttons to select channel 03 or 04 at the TV (whichever channel the CH3/CH4 switch on the back of the VCR is set to). (If the VCR remote control doesn't operate your TV, use the TV remote control to select channel 03 or 04.)

Press the VCR button.

Press the VCR/TV button to put the VCR in VCR position. The VCR light will appear on the display panel. The channel being recorded will appear on the screen.

Press the STOP/▲ button to stop the recording.

- If your VCR remote control does not operate your TV, see page 21 for details.
- If you use a Cable Box or Direct Broadcast System hookup, you may not be able to watch one channel while recording another. See pages eight-nine for details.

Helpful Hints

32 One-Touch Recording


The One-Touch Recording (OTR) feature allows you to set an immediate timed recording 30 minutes to eight hours long. Before you begin:

- Set up the channels at the VCR.
- Select a recording speed (SP, SLP) with the SPEED button.
- Put a tape in the VCR. Make sure the tape's record tab is intact and the tape is long enough to record the program(s).
- Place the VCR in VCR position. (The VCR light will appear on the display panel. If it does not, press the VCR/TV button once.)

Press the VCR button, then press the CH(annel) ▲/▼ button or the Number buttons to select the channel you want to record.

2

Press the REC(ord)/OTR button repeatedly until the desired recording length (30 minutes to eight hours) appears on the screen. Recording will begin immediately. The REC(ord) light and the Timer light will appear on the display panel.

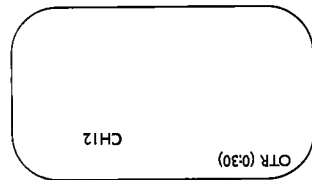


3


To stop an OTR before recording is finished, press the STOP/▲ button or the POWER button. To cancel the OTR but continue recording, press the REC(ord)/OTR button repeatedly until REC appears in the upper left corner of the TV screen. (STATUS must be set to ON. See page 25 for details.) The REC(ord) light will remain on the display panel of the VCR, but the Timer light will disappear.

Helpful Hints

- To check the time remaining for an OTR after the OTR has been set, press the STATUS/EXIT button.
- To change the recording length while an OTR is in progress, press the REC(ord)/OTR button until the desired length appears on the screen.
- If you begin an OTR when another recording is paused, the OTR will begin.
- You can not pause an OTR.
- If the preset time for a timer recording comes up during an OTR, the OTR has priority. A message will remind you when the timer recording was scheduled to begin. You may let the OTR continue; the timer recording will not take place. Or, stop the OTR and turn off the VCR immediately. The timer recording will take place if you turn off the VCR before the timer recording's scheduled start time.

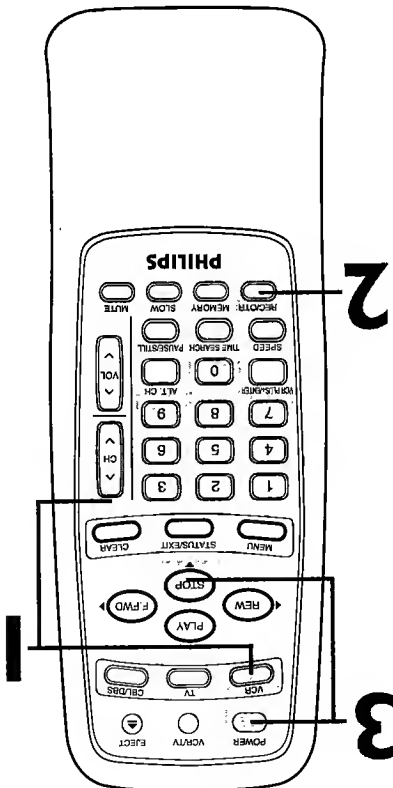

2-3

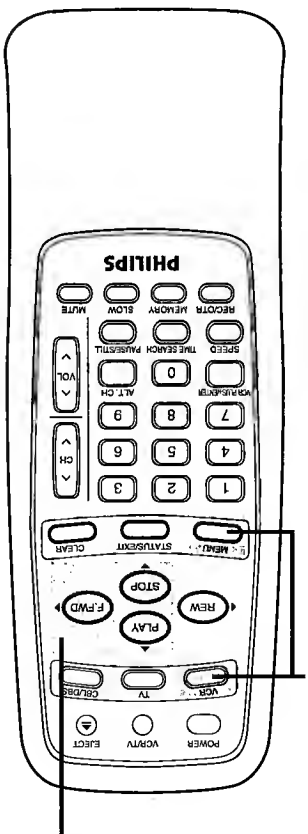

- Follow the steps below to program your VCR to record TV programs while you're away from home. The VCR will turn itself on, record, and turn itself off automatically. Before you begin:
- Set up the channels at the VCR.
 - Set the clock.
 - Put a tape in the VCR. Make sure the tape's record tab is intact and the tape is long enough to record the program(s).
 - Put the VCR in VCR position. The VCR light will appear on the display panel. If it does not, press the VCR/TV button once.
- Do each step within 60 seconds of the previous step.

1

Press the VCR button, then press the MENU button.

SELECT ►► CHOOSE ►
PROGRAM
TUNER SET UP
VCR SET UP
SET CLOCK
TO END PUSH EXIT

2

Press the PLAY/▲ button or the STOP/▼ button to select PROGRAM, then press the FWD/► button.

SELECT ►► CHOOSE ►
ONCE
DAILY
WEEKLY
PROGRAM REVIEW
TO END PUSH EXIT

3

Press the PLAY/▲ button or the STOP/▼ button to select

- ONCE, DAILY, or WEEKLY recording.** Then, press the FWD/► button.
- **ONCE:** The VCR will record a TV program on any day you choose, up to 12 months away.
 - **DAILY:** The VCR will record the same channel every day from Monday to Friday – starting at the same time and recording for the same length of time.
 - **WEEKLY:** The VCR will record the same channel on the same day, at the same time, and for the same length of time every week.

Daily Recording (example)

DAILY PROGRAM (MON-FRI)
PROGRAM - 1 2 3 4 5 6 7 8-
SELECT PROGRAM NUMBER
TO END PUSH EXIT

Instructions continue on page 34.

Helpful Hints

- If you need to make a correction while programming a timer recording, press the CLEAR button until the cursor is flashing on the item you want to change. Then enter the correct information.
 - With ShowGuard, if the power fails for more than one minute, programmed timer recordings will be restored when the clock is reset.
- Details are on page 52.

4

Use the Number buttons (1 - 8) to select a slot in which to store the timer recording. There are eight slots. Numbers for open slots will flash on the screen.

NOTE: If you enter a number for a slot that has already been used to store a timer recording, PREVIOUSLY SET PROGRAM will appear on the screen briefly. Information about the program in that slot will appear on the screen. If this happens, press the STATUS/EXIT button, then select another number.



5

Use the Number buttons to enter the channel you want to record.

- Cable Users, enter channel numbers as a two-digit number for the quickest results. For example, to select channel 6, press 0.6. If you only press the Number 6 button, channel 6 will be selected after a brief delay. There also may be a brief delay when you select channels 10, 11, and 12. If you want to select channels 100 and above, enter channel numbers as a three-digit number. For example, to select channel 117, press 1, 1, 7.
- Antenna Users, enter channel numbers as a two-digit number for the quickest results. For example, to select channel 5, press 0.5. If you only press the Number 5 button, channel 5 will be selected after a brief delay.
- If you are recording from line input, press 0.0 to select AV REAR. (You can not select AV FRONT for this feature.)
- If you are using a Cable Box/DBS, select the Cable Box/DBS output channel (03 or 04). Set the Cable Box/DBS to the channel you want to record. Leave the Cable Box/DBS on for the timer recording. See page eight for details.

6

Press two Number buttons for the hour you want the recording to begin. Press two Number buttons for the minute you want the recording to begin. Press 1 for AM or 2 for PM. For example, for 9:30 PM, press 09, 30, 2.

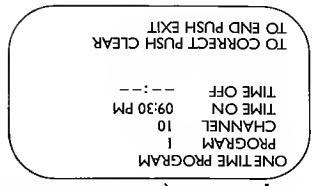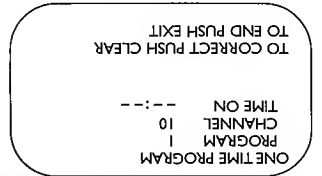


7

Follow the instructions in step 6 to enter the recording's stop time. (AM or PM will be set automatically.)

Helpful Hints

- Entries that do not match the VCR's clock or colorizer will cause a question mark to appear on the screen.
- If you are recording from line input, connect the audio and video cables to the AUDIO IN and VIDEO IN jacks on the back of the VCR. (You can not select AV FRONT. Please see illustration on page 37.)

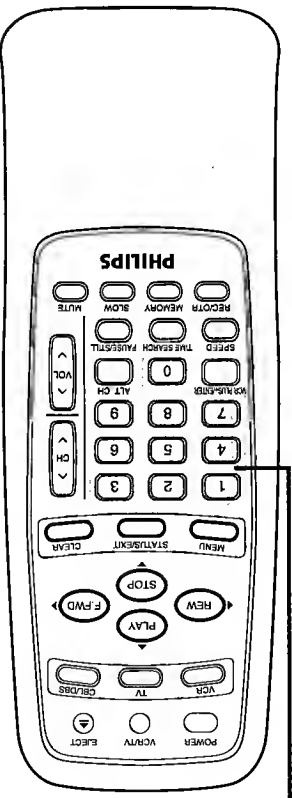

4-7

8 Press the Number 1 button to record in SP speed or the Number 2 button to record in SLP speed. (See the chart below.) You cannot use the SPEED button at this time.

ONE TIME PROGRAM	PROGRAM	1
	CHANNEL	10
	TIME ON	09:30 PM
	TIME OFF	11:00 PM
	REC SPEED	SLP
	SP=1	SLP=2
TO CORRECT PUSH CLEAR		
TO END PUSH EXIT		


9 Press two Number buttons for the month and two Number buttons for the day you want to record the program. For example, for July 10, 2000, press 07, 10. The day of the week and the year will appear automatically (you cannot program the VCR to record more than one year in advance).

ONE TIME PROGRAM	PROGRAM	1
	CHANNEL	10
	TIME ON	09:30 PM
	TIME OFF	
	REC SPEED	SLP
	START DATE	07/10/00
	MON.	
TO CORRECT PUSH CLEAR		
TO END PUSH EXIT		

10 Press the STATUS/EXIT button. PROGRAM WAS COMPLETED / PLEASE TURN OFF VCR FOR TIMER RECORDING will appear on the screen briefly. (If PROGRAM NOT COMPLETED appears, try again from step 1.)

11 Press the POWER button to turn off the VCR power. The timer light will appear on the display panel. If the timer recording will take place several hours or days from now, you may use the VCR until time for the recording. Turn off the VCR a few minutes before the recording starts. If you forget to turn off the VCR, PLEASE TURN OFF VCR FOR TIMER RECORDING flashes on your TV screen two minutes before a timer recording starts. Press the CLEAR button to remove the message.

Turn off the VCR for the recording. Insert a tape in the VCR. Leave the Cable Box/DBS on (if applicable).

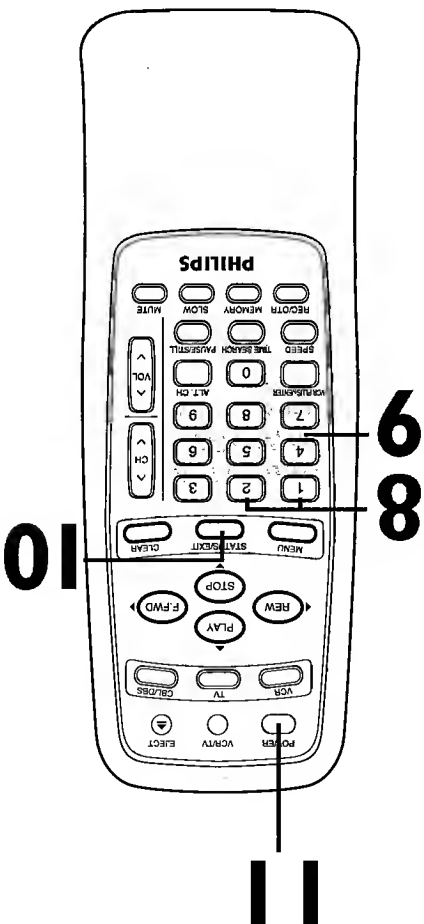

Tape Speeds This chart shows the recording/playback time for three types of video cassettes (T160, T120, and T60). There are three playback speeds: SP, LP, and SLP. You cannot record in LP speed.			
Tape Speed	SP (standard play)	2 hrs.	40 mins.
	LP (long play)	5 hrs.	20 mins.
SLP (super long play)	8 hrs.	6 hrs.	3 hrs.
	20 mins.	4 hrs.	2 hrs.
Cassette type / Playback Time			
T160 T120 T60			

36 Timer Recording (cont'd)

Checking or Cancelling Timer Recordings

1 With the VCR on and in VCR position (the VCR light will appear on the display panel), press the VCR button, then press the MENU button.


2 Press the PLAY/▲ button or the STOP/▼ button to select PROGRAM, then press the F.FWD/▶ button.

3 Press the PLAY/▲ button or the STOP/▼ button to select PROGRAM REVIEW, then press the F.FWD/▶ button. The timer recording information for the program in the lowest numbered slot will appear on the screen. If no timer recordings are set, nothing will happen when you press the F.FWD/▶ button.

4 Press the F.FWD/▶ button repeatedly to review all programmed timer recordings. If you don't press the F.FWD/▶ button within 10 seconds, the VCR will automatically display information about the next programmed timer recording. This will continue until all timer recordings have been displayed. Then the menu will disappear.

5 To cancel the timer recording displayed, press the CLEAR button. Either the display will disappear or information about other timer recordings will appear. If you do not press any other buttons, the display will disappear after all timer recordings have been displayed.

6 Repeat steps 1 - 4 to make sure you have cleared the correct timer recording.

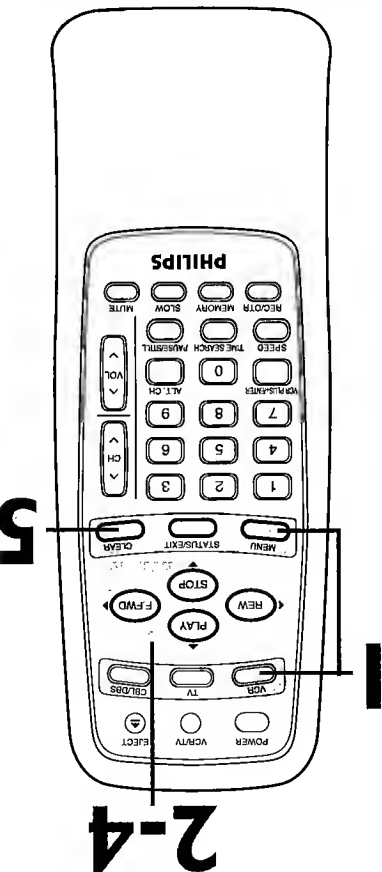


Helpful Hints

- CLASH may flash on the screen when you finish setting a timer recording. This means that the timer recording you just programmed and another timer recording overlap. The current timer recording will not take place. You may choose to cancel the overlapping timer recording.
- To stop a started timer recording, press the STOP/EJECT button on the VCR.
- If the preset time for a timer recording comes up during an OTR, the OTR has priority. A message will remind you when the timer recording was scheduled to begin. You may let the OTR continue; the timer recording will not take place. Or, stop the OTR and turn off the VCR immediately. The timer recording will take place if you turn off the VCR before the timer recording's scheduled start time.

See page 52 for more hints.

Rerecording (Tape Duplication) 37

The instructions on this page show you how to copy tapes. The illustration uses two VRB661 VCRs. Different VCRs may operate differently. To duplicate a tape, make the connections shown, then follow steps 1-7.

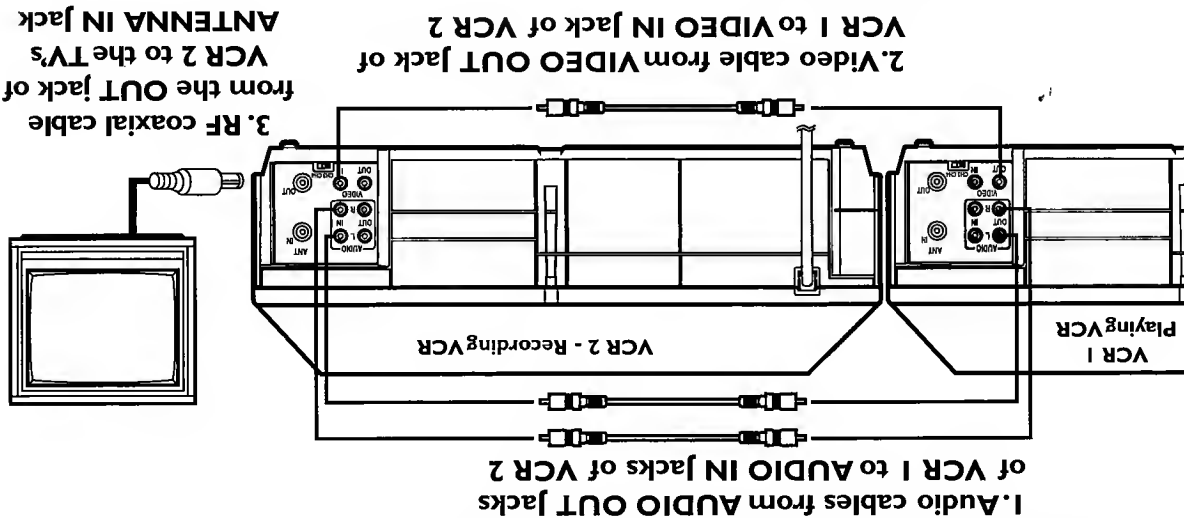

• Audio and Video cables are not supplied.

Make the connections shown above.

1 VCR 1 will play your tape. Put a prerecorded tape in VCR 1.

2 VCR 2 will record your tape. Insert a blank tape in VCR 2. The VCR must be in VCR position. (The VCR light will appear on the display panel. If it does not, press the VCR/TV button once.)

3 Turn on the TV and set it to channel 03 or 04, whichever channel the CH3/CH4 switch on VCR 2 is set to.

4 Point the remote control at VCR 2. Press the VCR button, then press Number buttons 0, 0, 1 or 0, 0, 2. (See Helpful Hints at right.)

5 Press the SPEED button to select SP or SLP at VCR 2.

6 Press the PLAY button on VCR 1 and the REC(ord)/OTR button on VCR 2 at the same time. To stop recording, press the STOP/EJECT button on VCR 1, then press the STOP/EJECT button on VCR 2.

- If you use the AUDIO and VIDEO IN jacks on the back of VCR 2, press Number buttons 0, 0, 1. AV REAR will appear on the screen. (Blue Background should be set to ON. Details are on page 50.)
- If you use the AUDIO and VIDEO IN jacks on the front of VCR 2, press Number buttons 0, 0, 2. AV FRONT will appear on the screen. (Blue Background should be set to ON. Details are on page 50.)
- Unauthorized recording of copyrighted television programs, videotapes, or other materials may infringe on the rights of copyright owners and violate copyright laws. If a program has copyright protection, it may not record clearly. These instructions show you how to copy tapes using two VCRs like yours. Different VCRs may operate differently.
- The VCR in the figure above is the VRB661. If you have the VRB461, use a single-plug audio cable to connect the AUDIO OUT jack on VCR 1 to the AUDIO IN jack on VCR 2.

Helpful Hints

.....

First, fill in the boxes on this page. It will only take a few minutes, and you must do it if you want the VCR Plus+ programming system to work properly.

Since the channel numbers of the stations you receive may not be the same as the station numbers, and since channel numbers differ from area to area, you must program the VCR with your local channel information. To fill in the boxes, you will need 1) a cable channel list, if applicable (you can request one from your cable company), and 2) a chart that lists VCR Plus+ channel numbers, which you can find in your TV guide or the TV listings of your local newspaper.


NOTE: If you are using a Cable Box/DBS, the Cable/TV channel must be 3 or 4 (the Cable Box/DBS output channel) for every VCR Plus+ channel.

[illegible][illegible]

Setting Up the VCR Plus+ Programming System (cont'd) 39

2 Examine the lists on page 38.

4-6

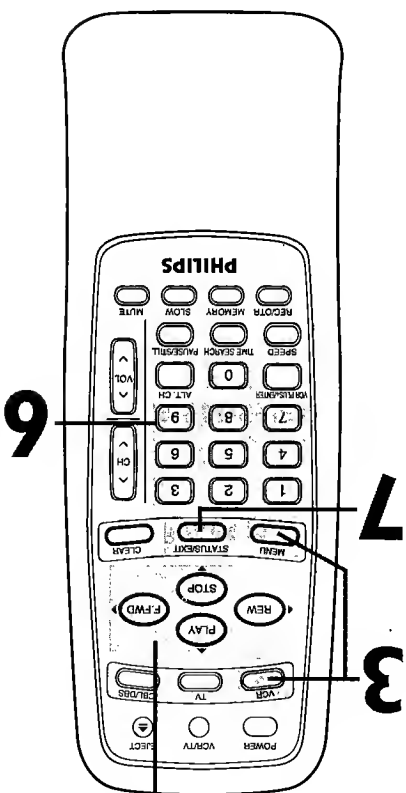

Now, compare the channel numbers you have written in the VCR PLUS+ CH, and CABLE/TV CH, columns. For stations whose VCR Plus+ and Cable/TV channels do not match, you must tell the VCR Plus+ and Cable/TV channel numbers by following steps 3 - 7. Make each entry within 60 seconds of the previous entry.

3 Press the VCR button, then press the MENU button.

4 Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/► button.

5 Press the PLAY/▲ button or the STOP/▼ button to select VCR PLUS+ REF. MAP, then press the F.FWD/► button.

6 Look at the lists you filled in on page 38. For stations whose VCR Plus+ and Cable/TV channels do not match, press the PLAY/▲ button or the STOP/▼ button until the arrow is beside the VCR Plus+ channel you need. Then, press the Number buttons to enter the corresponding Cable/TV channel from your list. Enter all the stations on your list.

• If you are recording from line input, press 0,0 to select AUX.

Connect the audio and video cables to the AUDIO IN and VIDEO IN jacks on the back of the VCR. (Please see illustration on page 37.) You can not use the AUDIO and VIDEO In jacks on the front of the VCR for this feature.

• If you are using a Cable Box/DBS, the Cable/TV channel will be 3 or 4 (the Cable Box/DBS output channel) for every VCR Plus+ channel. You must set the Cable Box/DBS to the channel you want to record; leave the Cable Box/DBS on for the timer recording.

VCR PLUS+ CROSS REF MAP	
VCR PLUS+ CABLE/TV	
124	1
125	2
126	3
127	4
128	5
129	6
130	7
131	8
132	9
133	0
134	1
135	2
136	3
137	4
138	5
139	6
140	7
141	8
142	9
143	0
144	1
145	2
146	3
147	4
148	5
149	6
150	7
151	8
152	9
153	0
154	1
155	2
156	3
157	4
158	5
159	6
160	7
161	8
162	9
163	0
164	1
165	2
166	3
167	4
168	5
169	6
170	7
171	8
172	9
173	0
174	1
175	2
176	3
177	4
178	5
179	6
180	7
181	8
182	9
183	0
184	1
185	2
186	3
187	4
188	5
189	6
190	7
191	8
192	9
193	0
194	1
195	2
196	3
197	4
198	5
199	6
200	7
201	8
202	9
203	0
204	1
205	2
206	3
207	4
208	5
209	6
210	7
211	8
212	9
213	0
214	1
215	2
216	3
217	4
218	5
219	6
220	7
221	8
222	9
223	0
224	1
225	2
226	3
227	4
228	5
229	6
230	7
231	8
232	9
233	0
234	1
235	2
236	3
237	4
238	5
239	6
240	7
241	8
242	9
243	0
244	1
245	2
246	3
247	4
248	5
249	6
250	7
251	8
252	9
253	0
254	1
255	2
256	3
257	4
258	5
259	6
260	7
261	8
262	9
263	0
264	1
265	2
266	3
267	4
268	5
269	6
270	7
271	8
272	9
273	0
274	1
275	2
276	3
277	4
278	5
279	6
280	7
281	8
282	9
283	0
284	1
285	2
286	3
287	4
288	5
289	6
290	7
291	8
292	9
293	0
294	1
295	2
296	3
297	4
298	5
299	6
300	7
301	8
302	9
303	0
304	1
305	2
306	3
307	4
308	5
309	6
310	7
311	8
312	9
313	0
314	1
315	2
316	3
317	4
318	5
319	6
320	7
321	8
322	9
323	0
324	1
325	2
326	3
327	4
328	5
329	6
330	7
331	8
332	9
333	0
334	1
335	2
336	3
337	4
338	5
339	6
340	7
341	8
342	9
343	0
344	1
345	2
346	3
347	4
348	5
349	6
350	7
351	8
352	9
353	0
354	1
355	2
356	3
357	4
358	5
359	6
360	7
361	8
362	9
363	0
364	1
365	2
366	3
367	4
368	5
369	6
370	7
371	8
372	9
373	0
374	1
375	2
376	3
377	4
378	5
379	6
380	7
381	8
382	9
383	0
384	1
385	2
386	3
387	4
388	5
389	6
390	7
391	8
392	9
393	0
394	1
395	2
396	3
397	4
398	5
399	6
400	7
401	8
402	9
403	0
404	1
405	2
406	3
407	4
408	5
409	6
410	7
411	8
412	9
413	0
414	1
415	2
416	3
417	4
418	5
419	6
420	7
421	8
422	9
423	0
424	1
425	2
426	3
427	4
428	5
429	6
430	7
431	8
432	9
433	0
434	1
435	2
436	3
437	4
438	5
439	6
440	7
441	8
442	9
443	0
444	1
445	2
446	3
447	4
448	5
449	6
450	7
451	8
452	9
453	0
454	1
455	2
456	3
457	4
458	5
459	6
460	7
461	8
462	9
463	0
464	1
465	2
466	3
467	4
468	5
469	6
470	7
471	8
472	9
473	0
474	1
475	2
476	3
477	4
478	5
479	6
480	7
481	8
482	9
483	0
484	1
485	2
486	3
487	4
488	5
489	6
490	7
491	8
492	9
493	0
494	1
495	2
496	3
497	4
498	5
499	6
500	7

7 Press the STATUS/EXIT button.

7

6

5

4

3

2

Helpful Hints

- To erase a Cable/TV channel number, repeat steps 3-5 on this page. Then, press the PLAY/▲ button or the STOP/▼ button until the arrow appears beside the Cable/TV channel you need to erase. Press the CLEAR button, then press the STATUS/EXIT button.
- When you receive the VCR, all the VCR Plus+ channel numbers and Cable/TV channel numbers are the same.

40 Timer Recording with the VCR Plus+ Programming System

Follow these steps to set a timer recording with the PlusCode

- Set up the channels at the VCR (page 12).
- Set up the VCR Plus+ and Cable/TV channel numbers (pages 38-39).

- Set the clock (pages 15-18).

List-Group">

- Put a tape in the VCR.

List-Group">

- Make sure the VCR light appears on the display panel. If it does

List-Group">

- not, press the VCR/TV button once.

List-Group">


- Do each step within 60 seconds of the previous step.

1

Press the VCR button.


2

Press the VCR PLUS+ button.

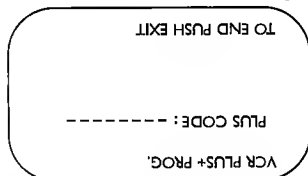

3

Press the Number buttons to enter the PlusCode programming number of the program you wish to record. Then, press the VCR PLUS+ button.

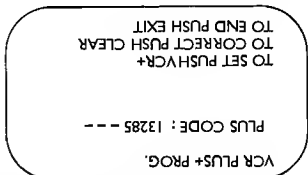

4

Press the **PLAY/▲** button or the **STOP/▼** button to select a **ONCE, DAILY, or WEEKLY** recording. Then, press the **F.WD/▶** button.

List-Group">



- **ONCE:** The VCR will record a TV program on any day you choose, up to 12 months away.

List-Group">

- **DAILY:** The VCR will record a program every day from Monday to Friday – starting at the same time and recording for the same length of time.

List-Group">

- **WEEKLY:** The VCR will record a program on the same day, at the same time, and for the same length of time every week.

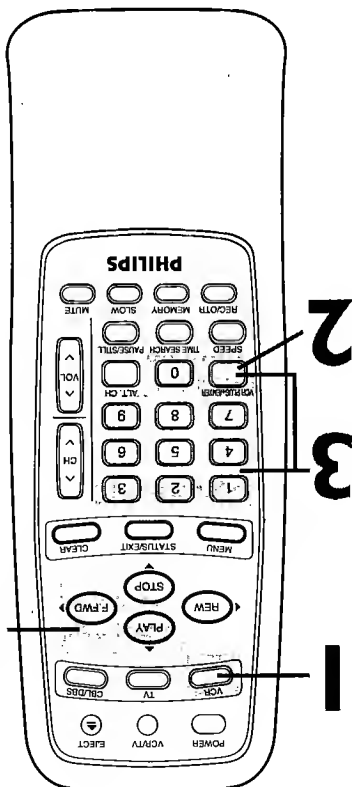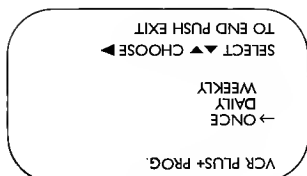

Helpful Hints

- **CODE ERROR** may flash on-screen after step 3 if you enter an incorrect PlusCode programming number (for example, one that is too short). The previous screen will appear. Enter the correct PlusCode programming number.
- If **CLASH** flashes on-screen after step 3, the timer recording you just programmed and another timer recording overlap. The current timer recording will not occur.
- You may use the **VCR Plus+** Programming System to record programs on Cable TV channels up to channel 125.
- With **ShowGuard**, if the power fails for more than one minute, programmed timer recordings will be restored when the clock is reset. Details are on page 52.

Turn off the VCR for the recording.
Insert a tape in the VCR.
Leave the Cable Box/DBS on (if applicable).


Press the **POWER** button to turn off the VCR power. The timer light will appear. The Timer light will flash if there is not a tape in the VCR.

If the timer recording will take place several hours or days from now, you may use the VCR until time for the recording. Just turn off the VCR a few minutes before the recording starts. If you forget to turn off the VCR, PLEASE TURN OFF VCR FOR TIMER RECORDING flashes on your TV screen two minutes before a timer recording starts. Remove the message by pressing the CLEAR button.

Press the **STATUS/EXIT** button. PROGRAM WAS COMPLETED / PLEASE TURN OFF VCR FOR TIMER RECORDING should appear on-screen briefly.

ONE TIME PROGRAM
 PROGRAM 1
 CHANNEL 09
 TIME ON 10:30 PM
 TIME OFF 11:30 PM
 REC SPEED SLP
 SP=1 SLP=2
 START DATE 10/10/00
 TUE
 TO END PUSH EXIT

Press the Number 1 button to record in SP speed or the Number 2 button to record in SLP speed. Your selection will appear beside REC SPEED on-screen; SP=1 SLP=2 will continue to flash. For details about tape speed, see pages 35 and 54. You cannot use the SPEED button at this time.

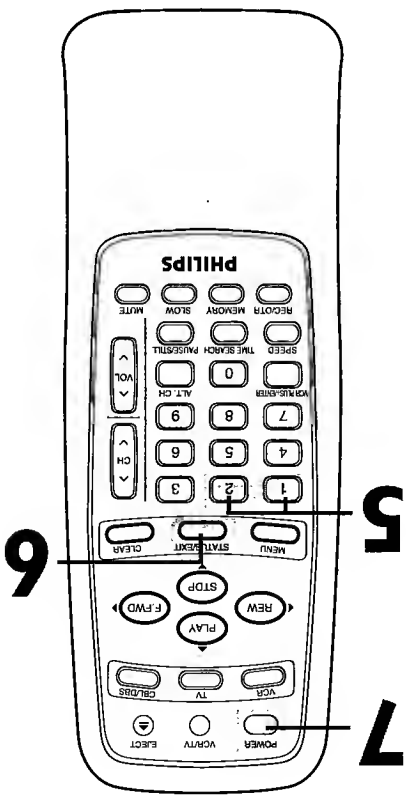

- Helpful Hints**
- If the preset time for a timer recording comes up during an OTR, the OTR has priority. A message will remind you when the timer recording was scheduled to begin. You may let the OTR continue; the timer recording will not take place. Or, stop the OTR and turn off the VCR immediately. The timer recording will take place if you turn off the VCR before the timer recording's scheduled start time.
 - To stop a started timer recording, press the STOP/EJECT button on the VCR.
 - If the power fails for more than one minute, VCR Plus+ channel numbers higher than 100 may be lost. In this case, repeat steps 2-7 on page 39. If you are using a Cable Box/DBS, timer recordings are programmed differently. See pages eight and 38-39 for details.
- See page 52 for more hints.

42 Repeat Play

Follow the steps below to make the VCR play a tape over and over.

1

Press the VCR button.

2

Press the MENU button.

3

Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/► button.

4

Press the PLAY/▲ button or the STOP/▼ button to select REPEAT PLAY.

5


Press the F.FWD/► button so that ON appears beside REPEAT PLAY.

6

Press the STATUS/EXIT button. Now, when a tape has finished playing, the VCR will rewind it and start playback again.

Helpful Hints

- To cancel Repeat Play, follow steps 1-4 above. At step 5, press the F.FWD/► button so that OFF appears beside REPEAT PLAY. Press the STATUS/EXIT button.
- The real-time counter memory does not function during Repeat Play.

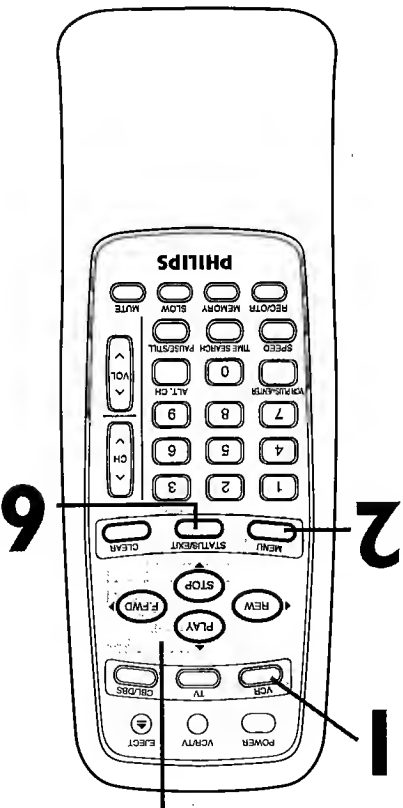


VRB661 only

SELECT ▲▼ CHOOSE ►
 → REPEAT PLAY
 ON SCREEN MODE
 AUDIO OUT
 LANGUAGE
 VCR PLUS+ REF MAP
 BLUE BACKGROUND ON
 TO END PUSH EXIT

SELECT ▲▼ CHOOSE ►
 → PROGRAM
 TUNER SET UP
 VCR SET UP
 SET CLOCK
 TO END PUSH EXIT

Real-Time Counter Memory 43


Follow the steps below to reset the real-time counter to zero at a tape location you want to refer to later.

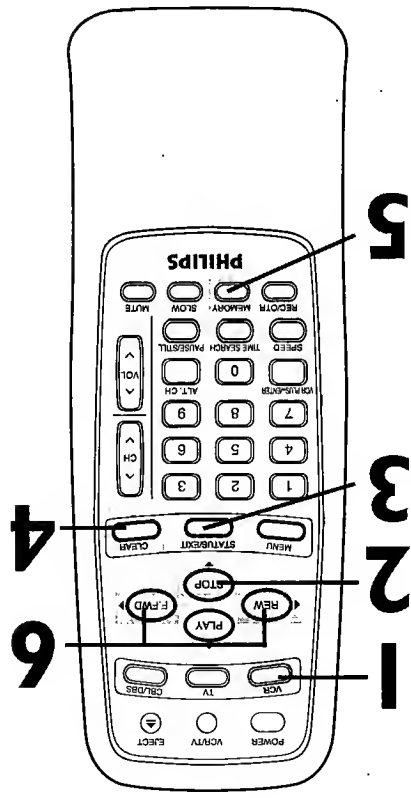


1 Press the VCR button.

2 Play, fast forward, or rewind a tape to the location that you would like to refer to later. Press the STOP/▲ button to stop the tape.


3 Press the STATUS/EXIT button to see the status display.

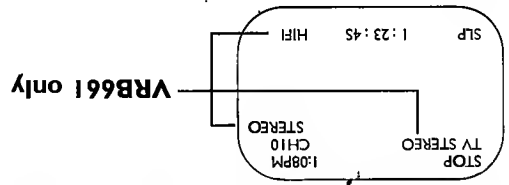

4 While the status display is on the screen, press the CLEAR button to reset the real-time counter to zero.

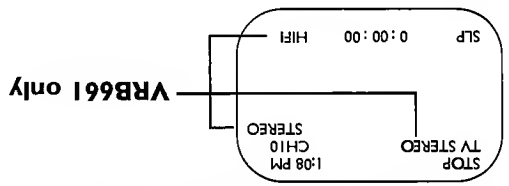

5 While the real-time counter is on the screen, press the MEMORY button so that M appears beside the counter.

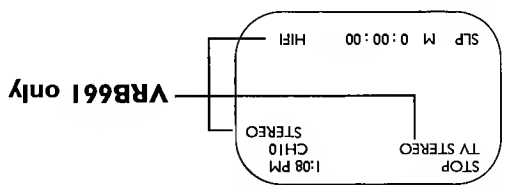

6 To go to a tape location where the real-time counter was reset to zero, press the REW(ind)/▶ button or the F.WD/◀ button when playback is stopped. When the tape reaches the point at which the counter was set to zero, the tape will stop. Press the PLAY/▲ button to watch the tape.

Helpful Hints

- The MEMORY button does not function if REPEAT PLAY is set to ON.
- Details are on page 42.
- To erase a real-time counter memory, press the MEMORY button until the M disappears from the screen.
- You may only set the real-time counter to zero at one location at a time. If you set the real-time counter to zero at a second location, the previous real-time counter to zero setting will be erased.

44 Time Search


Follow the steps below to program the VCR to search forward or backward on a tape a specific length of time. There must be a tape in the VCR.

1

Press the VCR button.

2

Press the TIME SEARCH button.

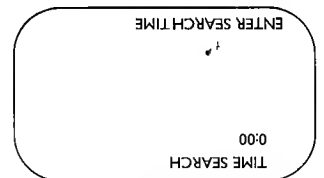

3


Within 10 seconds, use the Number buttons to enter the desired length of time you want to skip forward or backward. For example, for 1 hour, 25 minutes, press Number buttons 1, 2, 5. Or, for five minutes, press Number buttons 0, 5.

4

Within 10 seconds, press the FWD/▶ button or the REW(◀)/◀ button. The VCR will skip over the specified length of time, then begin playback.

Helpful Hints

- If you want to search for more than 59 minutes, you must enter the length of time in hours and minutes. For example, to search forward 70 minutes, press 1, 1, 0 at step 3.
- You can not do a Time Search while recording.
- To remove the Time Search display, press the TIME SEARCH button again.
- To cancel a Time Search that is in progress, press the STOP/▲ button.

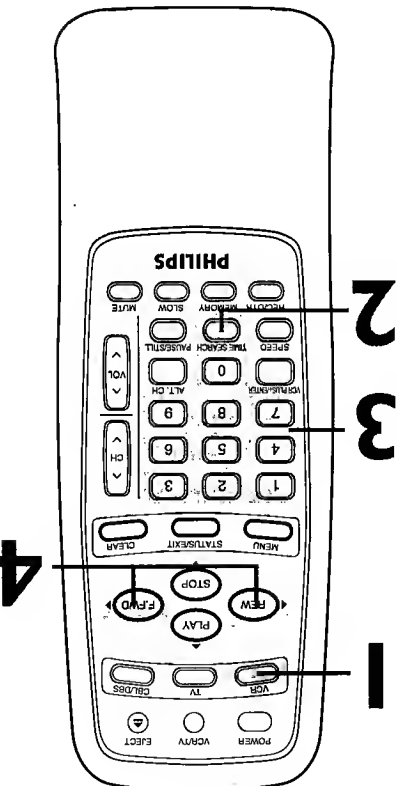

Forward and Reverse Searching (SP/LP/SLP)

1 During tape playback, press and release the **FWD/▶** button or the **REW(ind)/◀** button. A fast forward or reverse picture search will begin.

2 To return to playback, press the **PLAY/▶** button.

Super High Speed Searching (LP/SLP)

1 During tape playback, press the **FWD/▶** button or the **REW(ind)/◀** button, then press again. The VCR will now search in super high speed.

2 To return to normal playback, press the **PLAY/▶** button.


Viewing a Still Picture

1 To release the still picture and return to playback, press the **PLAY/▶** button or press the **PAUSE/STILL** button again.

Viewing a Slow Motion Picture

1 During tape playback, press the **SLOW** button. The tape will play in slow motion.

2 To release Slow mode and return to normal playback, press the **PLAY/▶** button or press the **SLOW** button again.

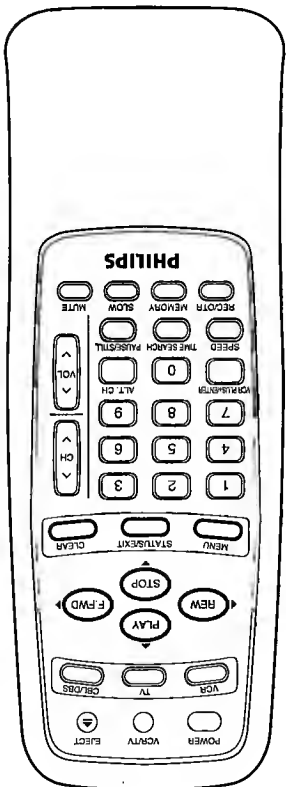

- Slow and Still modes will automatically switch to Stop mode after five minutes to protect the VCR and the tape from damage.
- SP/LP/SLP means this feature will work with tapes recorded in Standard Play, Long Play, or Super Long Play.
- LP/SLP means this feature will work with tapes recorded in Long Play or Super Long Play. For details about tape speed, see pages 35 and 54.

Helpful Hints

46 Automatic Operation Features

The following playback features will always operate.

Automatic Playback

When you put a tape in the VCR, the power will come on automatically. If the tape's record tab is missing, playback will begin. If a timer recording is set, the power will not come on automatically when you insert a tape with the record tab intact. If a timer recording is set and the VCR power is off, the VCR will eject the tape if the record tab is missing.

Automatic Rewind, Eject, Off

When a tape is played, fast forwarded, or recorded to its end, the VCR will rewind the tape, stop, eject the tape, then turn itself off. If the real-time counter memory is set, the VCR will only rewind the tape to the point at which the counter is set to zero, then stop. The VCR will not eject the tape automatically or shut itself off.

Tape Eject

A tape can be ejected with the VCR power on or off (but the VCR must be plugged in). If a timer recording is set, a tape can only be ejected with the power on. Make sure you insert a tape and turn off the VCR power for the timer recording.

Automatic Tracking Adjustment


The VCR adjusts tracking automatically to give you the best possible picture quality. With some recordings, however, you may get a better picture using the manual tracking controls (see below).

Manual Tracking

To manually adjust the tracking during playback and slow motion playback, press the CHANNEL ▲/▼ buttons on the VCR. (The CH(annel) ▲/▼ button on the remote control will not adjust tracking.)

Tracking will return to Automatic Tracking Adjustment when you press the STOP/▲ button or insert a tape.

You cannot manually adjust the tracking of a Still picture. However, you may press the CHANNEL ▲/▼ buttons on the VCR to remove vertical jitter in a Still picture.

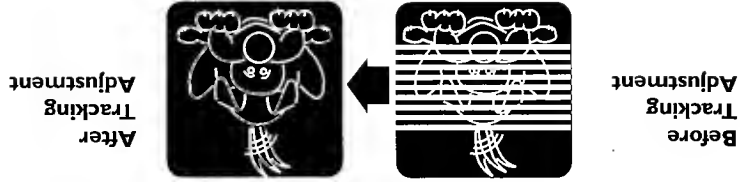

Multi-Channel Television Sound System (VRB661 only) 47


Your VCR can play recordings broadcast in Hi-Fi (high fidelity) stereo, which produces a crisp, clear sound from two sources. Your VCR also can play tapes recorded in a second audio (usually, that means your program is recorded in a second language). Of course, your VCR will play tapes recorded in monaural (single-source) sound as well.

Your VCR also will record in Hi-Fi stereo or in second audio, so when you play back that tape on the VCR, it will be in stereo or second audio. If you play back the tape on a VCR that can't play back tapes in stereo or second audio, the VCR will automatically play the tape in monaural sound.


Read the directions on this page to familiarize yourself with your VCR's stereo and second audio setups. Then follow the directions on page 48 to record in stereo or second audio and the directions on page 49 to play back tapes recorded in Hi-Fi stereo.

Understanding On-Screen Displays


When you receive a signal from a channel you're watching, portions of the on-screen display shown below will appear when you press the STATUS/EXIT button on the remote control.

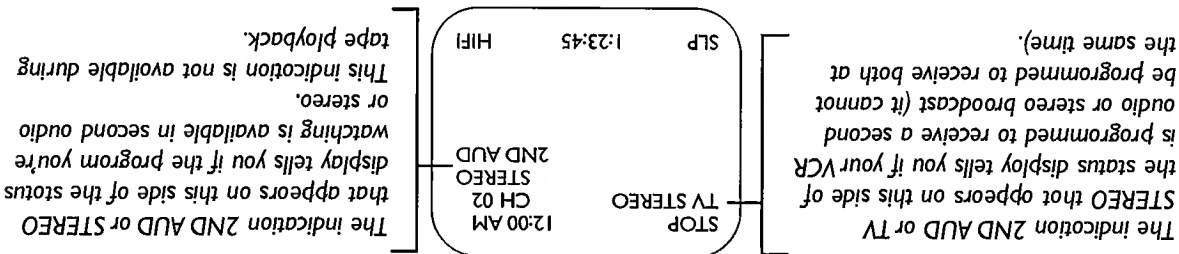

Specifically...

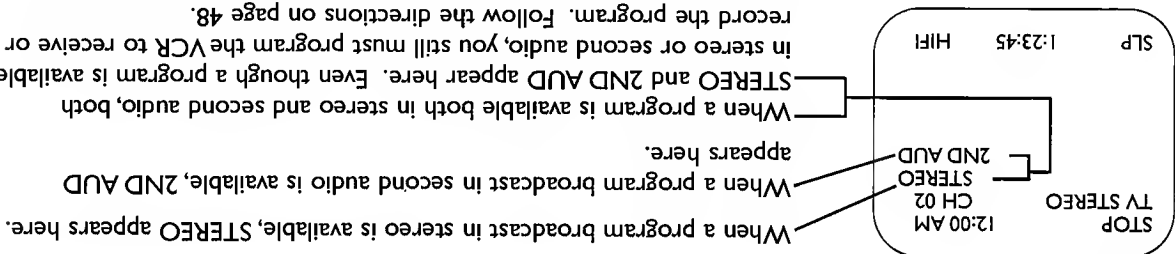

To record and play back programs broadcast in stereo, even if you have a Single Speaker TV, just use one of the connections shown, then follow the steps on pages 48-49.

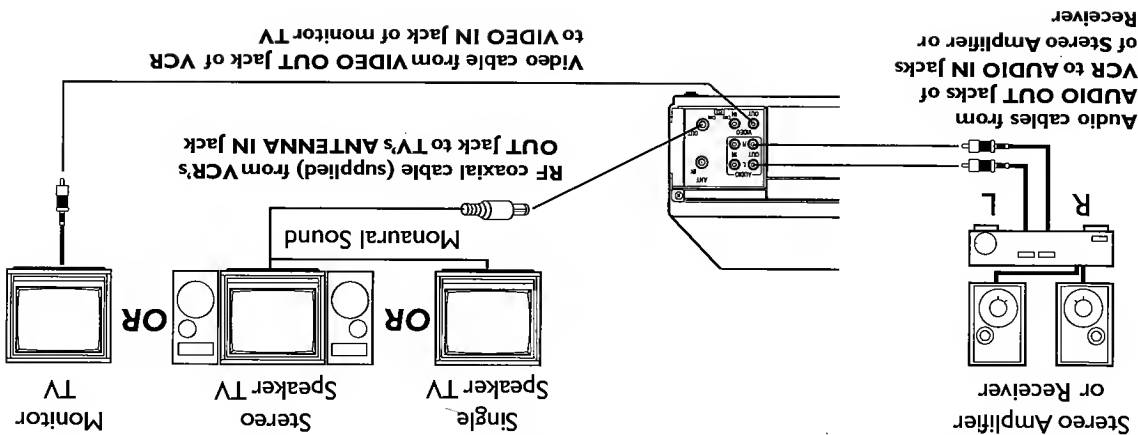

Press the VCR button, then press the MENU button.

SELECT ▲ CHOOSE ►
→ PROGRAM
VCR SET UP
TUNER SET UP
SET CLOCK
TO END PUSH EXIT

Press the PLAY/▲ button or the STOP/▼ button to select TUNER SET UP, then press the FWD/► button.


SELECT ▲ CHOOSE ►
→ AUTO PROGRAMMING
ADD/DELETE CH
CH MEMORY REVIEW
TV STEREO
2ND AUDIO
ON
TO END PUSH EXIT

Press the PLAY/▲ button or the STOP/▼ button to select TV STEREO or 2ND AUDIO. Then, press the FWD/► button. ON will appear to the right of your selection.

Press the STATUS/EXIT button.

To record, select the channel to be recorded using the CH(annel) ▲/▼ button.

Press the REC(ord)/OTR button to start recording.

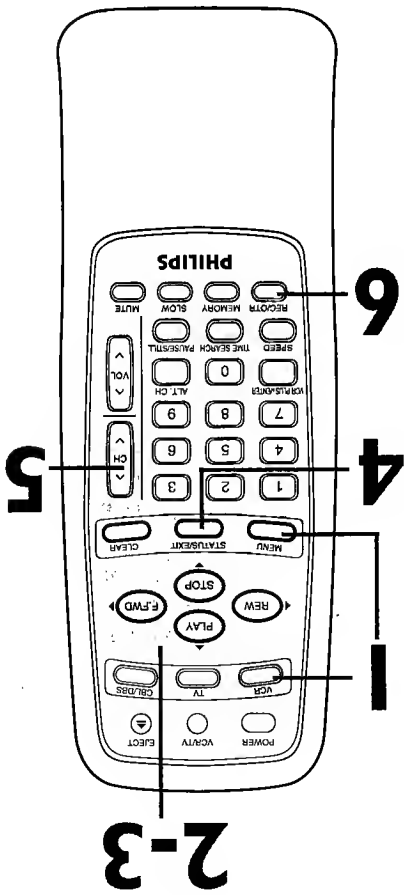

Helpful Hints


- You can only receive and record in stereo or second audio programs that are broadcast in stereo or second audio. You can only play in stereo or second audio tapes that were recorded in stereo or second audio. Please see page 47 to determine if the program you want to watch/record is being broadcast in stereo or second audio.
- If you select second audio when second audio is not available, the VCR will record normal audio.

Hi-Fi Stereo Sound System (VRB661 only) 49


Multi-Channel Television Sound system broadcasts are automatically recorded in Hi-Fi stereo sound. To play in Hi-Fi stereo the tapes recorded in Hi-Fi stereo, however, you'll need to follow steps 1-5.

1 Press the VCR button, then press the MENU button.


2 Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/► button.

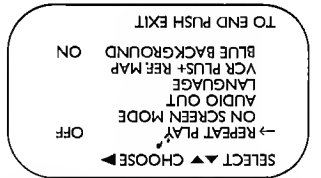

3 Press the PLAY/▲ button or the STOP/▼ button to select AUDIO OUT, then press the F.FWD/► button.

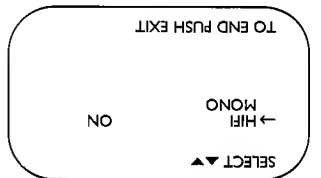

4 Press the PLAY/▲ button or the STOP/▼ button to select HIFI. ON will appear to the right of HIFI on the screen.

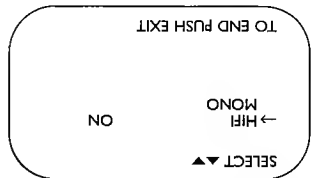


5 Press the STATUS/EXIT button.

Helpful Hints

- All programs are automatically recorded in both Hi-Fi stereo sound and in monaural sound.
- The audio level of a tape recorded in Hi-Fi stereo will differ from the audio level of a tape not recorded in Hi-Fi stereo.
- Normally, HIFI should be selected from the AUDIO OUT menu for playback with Hi-Fi sound. But you can change the selection to MONO if you want monaural audio play-back. To do this, follow steps 1-3. At step 4, press the PLAY/▲ button or the STOP/▼ button to select MONO. Press the STATUS/EXIT button. HIFI will disappear from the status display during TV viewing.
- If you play non-Hi-Fi tapes while the VCR is set to HIFI, the tape will play in monaural sound.

Please see additional notes on page 53.

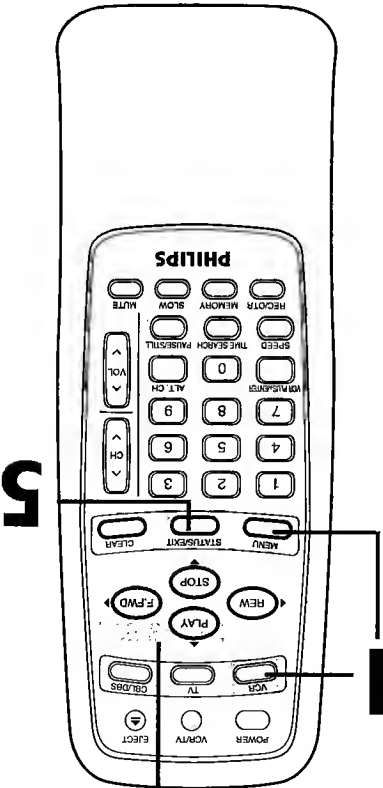


2-4

50 Blue Background


If you want the TV screen to be solid blue when a weak signal is received, set BLUE BACKGROUND to ON. The screen will be blue and the sound will be muted.
Or, if you want to receive the weak signal, set BLUE BACKGROUND to OFF. When you select a channel that is receiving a weak signal, you will see and hear the static in the TV program-ming. The channel number will not appear on the screen when you select a weak channel.
To set BLUE BACKGROUND to ON or OFF, follow these steps.

1 Press the VCR button.

2 Press the MENU button.

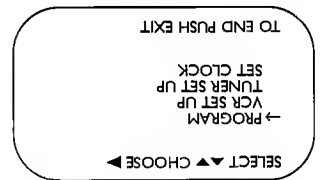


3 Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/► button.

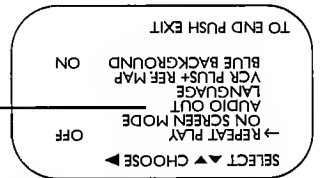

VRB661 only

4


Press the PLAY/▲ button or the STOP/▼ button to select BLUE BACKGROUND. Then, press the F.FWD/► button repeatedly so that OFF (or ON) appears beside BLUE BACKGROUND.

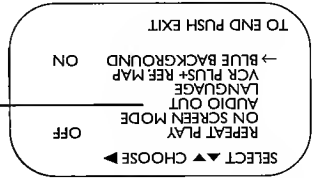

VRB661 only

5 Press the STATUS/EXIT button.

5

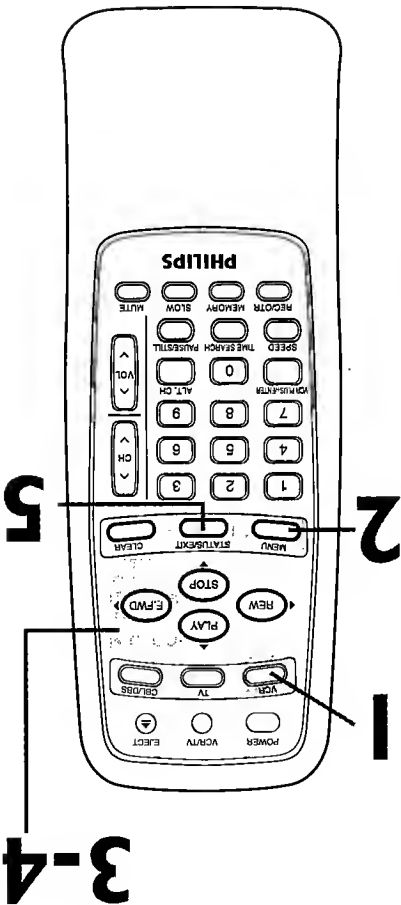

Child Lock 51

Child Lock prevents use of the VCR by deactivating the VCR feature buttons on the VCR and the remote control. To set the Child Lock, turn on the VCR power, then follow the steps below.


1 Press the VCR button.

2 Press and hold the POWER button on the remote control for 10 seconds so that CL appears on the display panel. The VCR will turn off.

When Child Lock is activated:

- The time will appear on the display panel. CL will appear on the display panel every two seconds.
- You may insert a tape. However, the VCR power will remain off and tape playback will not begin.
- You may press the EJECT button to remove the tape (unless a timer recording is programmed).
- Timer recordings will take place as scheduled, even if Child Lock is activated. CL will appear steadily on the display panel during the timer recording.
- The TV and Cable Box/DBS feature buttons of the remote control will still operate when Child Lock is activated.

3 To cancel the Child Lock, press the VCR button, then press and hold the POWER button on the remote control for 10 seconds so that the VCR turns on.

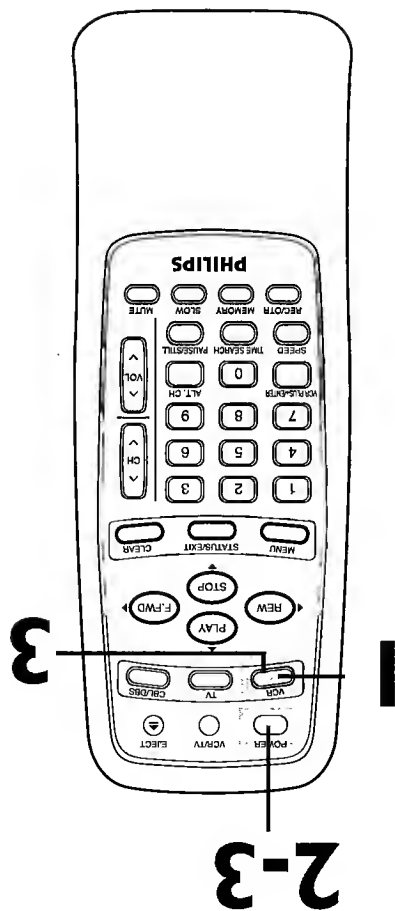

52 Helpful Hints

If you are having problems with your product, check this list of problems and possible solutions before requesting service. You may be able to solve the problem yourself. If you need to call a customer service representative, please know the model number and serial number of your product before you call. This information is displayed on the back of the product. Also, please take a moment to identify the problem you are having, and be prepared to explain this to the representative. If you believe the representative will need to help you with operations, please stay near the product. Our representatives will be happy to assist you.

No power

- Make sure the power plug is completely connected to an AC (alternating current) outlet.
- Make sure the power is turned on.

Power Failure

- With ShowGuard, if the power fails for more than one minute, programmed timer recordings will be restored when the clock is reset. (The clock will reset itself automatically if you are using the AUTO CLOCK feature. Details are on page 17. If you are not using the AUTO CLOCK feature, reset the clock manually. Details are on pages 15-16.) The timer recording will not occur only if the timer recording was scheduled to take place during the power failure.

A TV program cannot be recorded.

- Check the connections between the VCR, TV, antenna/cable, and Cable Box/Direct Broadcast System (if applicable). Details are on pages six-10.
- Make sure the tape has a record tab. Details are on page five.
- Check the TV/VCR position. Details are on page 27.
- Check the CH3/CH4 switch. Details are on pages six-nine.

The VCR will not perform a timer recording.

- Make sure the recording start and stop times are set correctly. Details are on pages 33-36.
- Make sure a tape is in the VCR and the tape has a record tab. Details are on page five. If, after programming a timer recording, you turn off the VCR power without putting a tape in the VCR, the Timer light will blink.
- If the record tab on a tape is missing, the VCR will eject the tape. The Timer light will blink.
- Make sure the VCR power is off.
- Make sure the clock is set. Details are on pages 15-18.
- If you have a Cable Box/Direct Broadcast System, timer recordings are programmed differently. Details are on page eight.
- Finish programming a timer recording at least five minutes before the recording is set to begin.
- 12 p.m. is noon; 12 a.m. is midnight.

There is no playback picture or the playback picture is noisy or contains streaks.

- Make sure the TV is on the same channel as the VCR's CH3/CH4 switch.
- Make sure the VCR is in VCR position. (The VCR light will appear on the display panel.)
- Make sure channel 03 or 04 is properly adjusted at the TV.
- Adjust the tracking. Details are on page 46.
- TVs placed too close to the VCR can cause interference during tape playback. Move the VCR away from the TV.

The VCR cannot be controlled with the remote control.

- Press the VCR button, then try the other VCR feature buttons.
- Make sure the VCR light appears on the display panel. If it does not, press the VCR/TV button once.
- Aim the remote control directly at the VCR's remote sensor. Details are on page 27.
- Remove all obstacles between the remote control and the VCR.
- Inspect and/or replace the batteries in the remote control. Details are on page five.

The VCR cannot be controlled.

- Check the Child Lock. Details are on page 51.
- The Number buttons won't work for channels above 69.
- Enter channel numbers as a two-digit number. If you want to select channels 100 and above, enter channel numbers as a three-digit number. Details are on page 23.

TV programs cannot be watched normally.

- Put the VCR in TV position. (Press the VCR/TV button so that the VCR light disappears from the display panel.) Details are on page 27.
- Check the connections between the VCR, TV, antenna/cable, and Cable Box/Direct Broadcast System (if applicable). Details are on pages six-10.

Tape cannot be inserted.

- Insert the tape, window side up, with the record tab facing you.

- Make sure a tape isn't already in the VCR by pressing the STOP/EJECT button on the VCR.
- Gently push on the center of the tape when putting it in the VCR. Never force the tape into the VCR.
- If a timer recording is programmed and the VCR power is off, you can not insert a tape without a record tab.

Tape cannot be removed.

- Make sure the power plug is completely connected to a power outlet.
- You have set a timer recording. Turn the VCR power on, then eject the tape. Be sure to insert a tape and turn off the power for your timer recording.
- VCR ejects the tape when the REC(ord)/OTR button is pressed or when the VCR power is turned off to set a timer recording.
- Make sure the tape has a record tab. Details are on page five.

Poor reception

- You may need to tune your TV again.

The motor (cylinder) rotates even when the VCR is in Stop mode.

- To enable the quick play mechanism, the cylinder will rotate for about five minutes. This is normal. The quick play mechanism allows the tape mechanism to switch from Stop mode to Play mode in one second.
- Watching one TV channel while recording another may not be possible if you have a DBS hookup. You may have to set your TV to channel 03 or 04, then make your channel selections at the DBS. Details are on page nine.

- With many DBS hookups, if you use accessory audio and video cables to connect your VCR to your TV, you will have to put your VCR in Line Input mode (channel 001 or 002).

Line Input mode

- If you accidentally enter Line Input mode (AV FRONT or AV REAR will appear on your TV screen briefly), press the CH(annel) ▲/▼ button or use the Number buttons to select another channel.

Hi-Fi Stereo Sound (VRB661 only)

- During playback, Hi-Fi audio may temporarily revert to normal audio when you adjust tracking. This is normal.
- When connecting the VCR to a stereo TV, you will only get stereo sound if you use audio cables to connect the AUDIO OUT jacks on the VCR to the AUDIO IN jacks on your TV, and if the TV is in Line (Auxiliary) Input mode.
- When you connect the AUDIO OUT jacks on the VCR to the AUDIO IN jacks on your TV, the stereo light on the TV might not glow. But, as long as the status display indicates you are receiving a stereo signal, you are receiving a stereo signal. This is normal.
- Only tapes recorded in Hi-Fi audio will play back in Hi-Fi audio. Tapes recorded in normal audio will play back in monaural audio.

Cleaning the Video Heads

- Your VCR automatically cleans the video heads each time you insert a tape. However, the heads may become dirty. If so, use a commercially-available head cleaner or have an authorized servicer clean the video heads. Eventually, the heads may need to be replaced.

The playback picture is too dim, too bright, or fluctuates in brightness.

- Some programs may be broadcast with copyright protection technology in order to protect the rights of copyright owners. This technology is used on programs that are recorded on video tapes or Digital Video Discs (DVDs), as well as some programs broadcast by antenna/cable/satellite television channels. Programs broadcast with copyright protection technology may not record clearly. Likewise, if you play a tape that is a recording of a copyright protected program, the picture may not be clear. Tapes of copyright protected programs may have a picture that is dark or dim, or the brightness of the picture may fluctuate. Therefore, you should avoid recording or playing copies of copyright protected programs. This VCR incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

AUDIO IN/OUT jacks: jacks located on the front and back of the VCR which are used to record audio from another source (IN) or to send audio to another system (OUT).

The VRB461 has a single AUDIO IN jack on the front and back of the VCR. It has a single AUDIO OUT jack on the back of the VCR. The VRB661 has Right and Left AUDIO IN jacks on the front and back of the VCR. It has Right and Left AUDIO OUT jacks on the back of the VCR.

Automatic Channel Setup: process in which the VCR memorizes all available channels. Then, when you press the CH(annel) ▲/▼ button, you only scan through channels you receive.

Bands: settings that allow you to tune channels. **Antenna** – VHF (very high frequency; channels 2-13) and UHF (ultra high frequency; channels 14-69).

Cable – all standard channels can be received without a Cable Box. **Cable Box/DBS Output Channel:** 03 or 04.

Dubbing: copying a tape using a second VCR.

Frame: a still picture.

HQ: high quality; a feature in the VCR circuitry which provides enhanced picture detail.

Line Input: The channel to which you set your VCR during dubbing. If you use the AUDIO and VIDEO In jacks on the front of the VCR, select channel 002 (AV FRONT). If you use the AUDIO and VIDEO In jacks on the back of the VCR, select 001 (AV REAR). If you accidentally enter Line Input mode, press the CH(annel) ▲/▼ button or use the Number buttons to select another channel.

OTR: One-Touch Recording; a timed recording that starts immediately and records for 30 minutes to eight hours.

Remote Control: the small electronic unit that came with your VCR; allows you to operate your VCR from a distance. You may be able to operate your TV, Cable Box, or Direct Broadcast System with the remote control.

RF coaxial cable: The cable supplied with your VCR. Use it to connect your VCR to your TV (or Cable Box or DBS). The supplied cable is a snap-on type. However, you may use a screw-on type if you prefer.

Special Effects: forward and reverse searching; a still picture; slow motion playback.

Tape Speeds: how fast the tape travels during a recording or playback. **SP** (standard play) – fastest tape speed (recording time for a T120 tape is approximately two hours); best picture quality. **LP** (long play) – average tape speed; playback only. **SLP** (super long play) – slowest tape speed (recording time for a T120 tape is approximately six hours).

VCR: video cassette recorder.

VIDEO IN/OUT jacks: jacks located on the front and back of the VCR which are used to record video from another source (IN) or to send video to another system (OUT).

Video Heads
Four heads – Hi-Fi (VRB661)
Four heads (VRB461)

Video Signal
EIA standards; NTSC color

Antenna
VHF/UHF – 75 ohm external antenna terminal

VHF Output Signal
Channel 03 or 04 (switchable)
75 ohms unbalanced

Power Requirement
120V AC; 60Hz

Power Consumption
19W (VRB661)
18W (VRB461)

Operating Temperature
41°F (5°C) to 104°F (40°C)

Relative Humidity
10% to 80%

Weight
5.5 lbs. (2.5 kg.) (VRB661)
5.3 lbs. (2.4 kg.) (VRB461)

Dimensions
14-3/16" (W) × 3-5/8" (H) × 8-3/4" (D)
(360mm × 92mm × 223mm)

Tuner Broadcast Channels
VHF 2-13, UHF 14-69

Cable TV Channels
1-125

NOTE: Designs and specifications are subject to change without notice.

VIDEO CASSETTE RECORDER or PLAYER

90 days Free Exchange / 91 days—One Year Reduced-Cost Exchange

WHO IS COVERED?

You must have proof of the date of purchase to exchange your product. A sales receipt or other document showing the date that you purchased the product is considered such proof.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, you may exchange the defective product for a new product at the store from which it was purchased or through Philips. This exchange is made at no cost to you.

From 91 days to one year from the date of purchase, you must follow the exchange procedures set out on the next page. For an exchange during this warranty period you must pay \$29.95 for a new or renewed product. This reduced-cost exchange ends one year after the date of purchase. The replacement product is covered only for the warranty period of the original product. When the warranty on the original product expires, the warranty on all replaced products also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics.
- recaption problems caused by signal conditions or cable or antenna systems outside the product.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, pre-recorded material, whether copyrighted or not copyrighted.)
- damage caused by the use of non-VHS tapes or tapes that have not been tested and labeled for use in two, four, six, and eight hour VHS recorders.
- a product that is used for commercial or institutional purposes (including but not limited to rental purposes).

WHERE IS EXCHANGE AVAILABLE?

Warranty exchange is available in all countries where the product is officially distributed by Philips Consumer Electronics. In countries where Philips Consumer Electronics does not distribute the product, the local Philips

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of date of purchase. Attach it to the owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE EXCHANGING THE PRODUCT...

Please check your owner's manual before exchanging the product. Adjustments of the controls discussed there may save you time and money.

TO EXCHANGE YOUR PRODUCT IN THE U.S.A.,

PUERTO RICO, OR U.S. VIRGIN ISLANDS... Follow the instructions stated previously in the "What is Covered" section, or refer to the exchange instructions on the next page.

In the U.S.A., Puerto Rico, and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. Because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.

TO EXCHANGE A PRODUCT IN CANADA...

Please contact Philips at:
1-800-661-6162 (French Speaking)
1-800-363-7278 (English Speaking)

In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental, or consequential damages, howsoever incurred, even if notified of the possibility of such damages.

TO GET OUT-OF-WARRANTY EXCHANGE...

In the U.S.A., Puerto Rico, or U.S. Virgin Islands, contact Philips Service Solutions Group at 1-800-531-0039 to obtain the cost of out-of-warranty exchange.

REMEMBER...

Please record below the model and serial numbers found on the product. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____

SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state to state.

EXCHANGE INSTRUCTIONS

If your product is defective, you may be able to exchange it at the store from which it was purchased. Most stores display a Return Policy. If not, ask the manager or sales associate how many days you have to exchange a product with them. After the store's return period has expired, you may exchange the product with Philips if you have your original sales receipt.

To exchange your product with Philips (per the warranty conditions stated previously), remember:

- If you exchange the product within 90 days of the original purchase, there is no cost to you.
- If you exchange the product more than 90 days after but less than one year after the day of original purchase, your cost will be \$29.95.
- After 12 months from the day of original purchase, contact Philips Service Solutions Group at 1-800-531-0039 for information regarding out-of-warranty exchange.
- If you do not have your original sales receipt, or if you have any questions, call Philips Service Solutions Group at 1-800-531-0039.

To obtain a replacement product from Philips:

1. Complete the Exchange Form below.
2. Pack the product and its accessories (remote control, rf coaxial cable, owner's manual, and car battery cord, if applicable) in the original box or a suitable alternative. You will receive replacement accessories with your replacement product. For packing details, call 1-800-531-0039.
3. Put the completed Exchange Form, a copy of the original sales receipt, and the proper payment in an envelope. Do not staple or clip these items together. Label the envelope "Return Documents Enclosed." Place this envelope in the box with the product.
4. Seal the box with packing tape and return the product, insured and freight prepaid, to:

Philips Consumer Electronics
El Paso Recovery Center
Suite A, 12375 Pine Springs Drive
El Paso, Texas 79927

A replacement will be sent to you via United Parcel Service (UPS) within 48 business hours of Philips' receipt of the product.

EXCHANGE FORM

Your Address (street address to which replacement should be delivered, no P.O. boxes allowed):

Name:

Street Address:

City:

State:

Zip Code:

Apt #:

Payment Amount:

Method of Payment: (Check one. Please, no cash or CODs.)

Check or money order

American Express

Visa

Novus/Discover

Mastercard

Signature: _____

Detailed reason for return, use additional paper if necessary: _____

Account number

Expiration date



Remember, the return box should include the following:

- The product,
- Accessories supplied with the product, and
- Completed Exchange Form and sales receipt, Payment, if applicable.

ac power cord.....28	accessories.....60	attach button.....24	antenna) in jack.....6-10, 28	audio in/out jacks.....10, 27, 28, 37, 47 54	automatic.....46	playback.....46	rewind, eject, off.....46	batteries.....5	blue background.....50	cassette compartment.....26	cassette-inside light.....26	cbi/dbb button.....5, 22, 24	ch(annel)*/▲/▼ button.....24	ch3/ch4 switch.....6-9, 28	channel.....13	adding.....13	deleting.....13	reviewing.....14	selection.....23	setup.....1-14	▲/▼ buttons.....27, 46	child lock.....51	clear button.....24, 43	clock display.....26	clock setting.....15-19	connections.....6-10	contents, table of.....4	controls	remote.....23-24	vcr.....26-28	copyright protection.....37, 53	counter only mode.....25	daylight-savings time.....19	display panel.....26	duplication.....37	eject button.....23	f.twd/▶ button.....24, 27, 45	front panel.....27	glossary.....54	head cleaner.....3, 5, 53, 56	helpful hints.....52-53	hi-fi stereo sound system.....49	hookups	with cable box/dbb.....8-9	with stereo tv.....10	without cable box/dbb.....6-7	language selection.....11, 20			
line input mode.....12, 37, 54	long play.....35, 54	lp.....35, 54	memory button.....23, 43	menu button.....23, 27	mute button.....23	number buttons.....23	on-screen status displays.....25	one-touch recording.....32	out jack.....6-9, 28	pause button.....27	pause/still button.....23, 30, 45	play/▶ button.....23, 27, 29, 45	playing.....29	power	button.....23, 27	cord.....28	pwr.(power) light.....26	real-time counter.....43	rear panel.....28	rec/orc button.....23, 27, 30, 32	rec(ord) light.....26	recording	basic.....30	one channel/	watching another.....31	prevention.....5	timer.....33-36	with the vcr plus+	programming system.....38-41	remote control	buttons.....23-24	sensor.....27	using.....42	repeat play.....42	rererecording.....37	rew(ind)/▶ button.....24, 27, 45	rf coaxial cable.....6-9, 37, 54	safety precautions.....3	searching.....45	second audio broadcast	receiving.....47-48	recording.....47-48	sensor (remote).....27	showguard.....33, 40, 52	slow	button.....23	motion.....45	slp.....35, 54	sp.....35, 54	speed button.....23
sqpb.....29	standard play.....35, 54	status display.....25	status/exit button.....24, 25, 27	stereo	broadcast	receiving.....47-48	recording.....47-48	hookups.....47	stereo TV hookups.....10	still picture.....45	stop/▶ button.....24	stop/eject button.....27	super high speed searching.....45	super long play.....35, 54	table of contents.....4	tape	duplication.....37	eject.....23, 27, 46	speed.....35, 54	time	search button.....24, 44	setting.....15-19	timer	light.....26	recording	cancelling.....36	checking.....36	setting.....33-35	with vcr plus+ programming	system.....38-41	tracking.....46	tv	button.....5, 21, 24	controls.....5, 21, 23-24	hookups.....6-10	position.....24, 27	vcr	button.....5, 23	light.....26	plus+/enter button21-22, 24, 40	plus+	programming system.....38-41	position.....24, 27	vcr/tv button.....24, 27	video in/out jacks.....10, 27, 28, 37, 47, 54	vol(ume) ▲/▶ button.....23	warranty.....56-57		

SUPPLIED ACCESSORIES



The following items are supplied with your VCR; they are provided to help you use or set up your VCR.

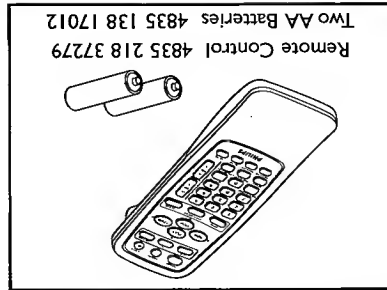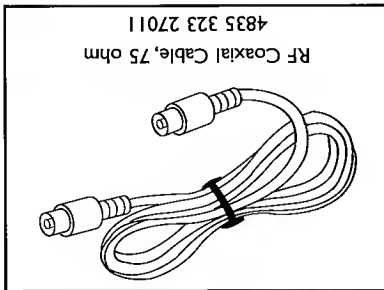

OPTIONAL ACCESSORIES

The following additional items are not provided with your VCR, but they are designed for use with your new VCR. To order these optional accessories, contact us at:

Philips Parts & Accessories Marketing Department
401 East Old Andrew Johnson Highway
P.O. Box 555
Jefferson City, TN 37760
1-800-851-8885.

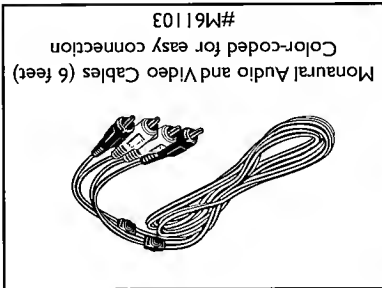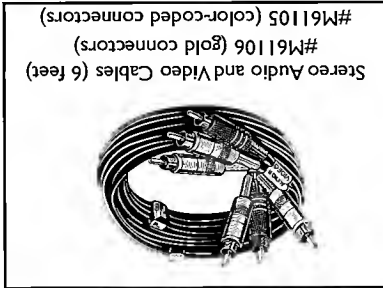

This owner's manual is made of recyclable materials.
Remember to recycle!



As an Energy Star® Partner, Philips Consumer Electronics Company has determined that this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark.